CONTAX 167MT

ASSEMBLING CHART

KYOCERA CORPORATION
Optical Equipments Division

SERVICE 870601

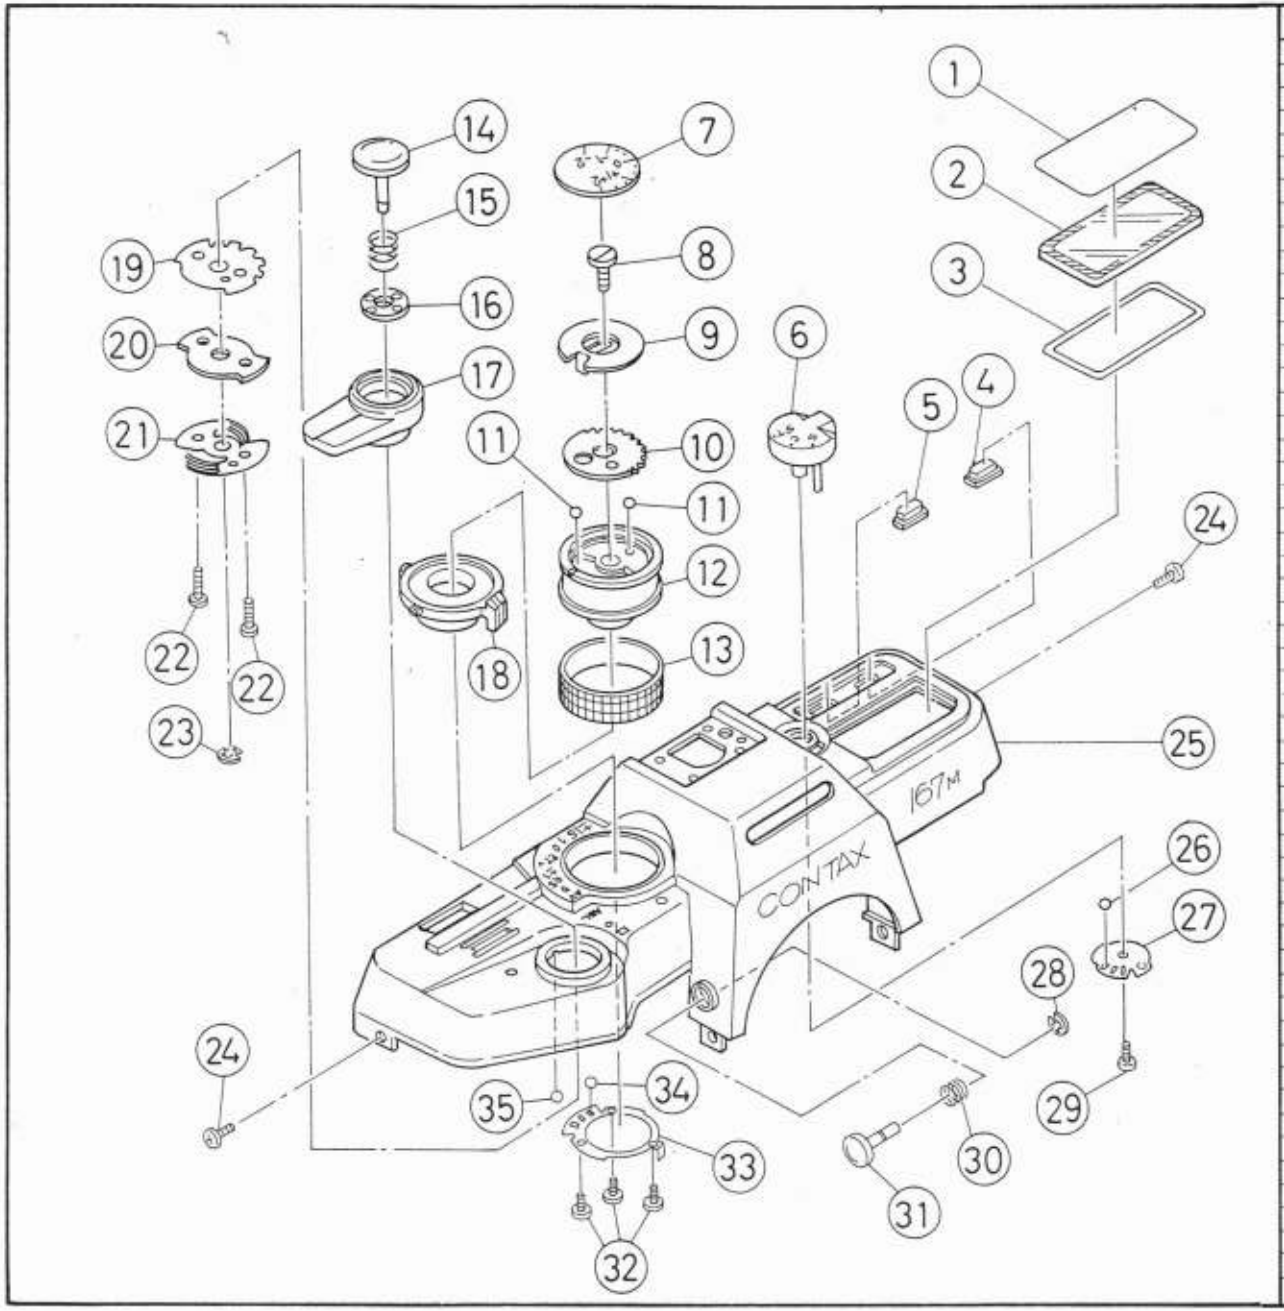

	PARTS NO.	DESCRIPTION	Q'TY
1	174 231	LCD PROTECTOR	1
2	174 226	LCD WINDOW	1
3	174 221	LCD WINDOW TAPE	1
4	174 223	MODE BUTTON (S)	1
5	174 222	MODE BUTTON (L)	1
6	174 227	MODE DIAL	1
7	174 286	EXP. COMPENSATION NAME PLATE	1
8	174 289	EXP. COMPENSATION CLICK S.S	1
9	174 290	EXP. COMPENSATION NAME PLATE HOLDER	1
10	174 288	EXP. COMPENSATION CLICK	1
11	66701620	STEEL BALL (ø1.6)	2
12	174 285	EXP. COMPENSATION DIAL	1
13	141 261	ASA DIAL COVER	1
14	174 216	RELEASE BUTTON	1
15	139 313	RELEASE SPRING	1
16	174 217	RELEASE LEVER BASE PLATE	1
17	174 214	RELEASE LEVER	1
18	174 232	COMPENSATING VALUE SETTING LEVER	1
19	174 218	L. LEVER CLICK	1
20	174 219	L. LEVER STOPPER	1
21	174 260	MAIN SWITCH	1
22	61914026	MAIN SWITCH S.S	2
23	66101225	E RING (E-12)	1
24	61914029	TOP COVER S.S	2
25	*	TOP COVER	1
26	66701520	STEEL BALL (ø1.5)	1
27	174 228	MODE CLICK	1
28	66101225	E RING (E-12)	1
29	69213076	MODE CLICK S.S	1
30	131 818	LENS LOCK BUTTON SPRING	1
31	174 224	LENS LOCK BUTTON	1
32	69103066	C. VALUE SETTING LEVER CLICK S.S	3
33	174 235	C. VALUE SETTING LEVER CLICK	1
34	66701620	STEEL BALL (ø1.6)	1
35	66701520	STEEL BALL (ø1.5)	1
1-6,14-23,25-35,			
	174 A17	TOP COVER ASS'Y (SEE PAGE NO.2)	1

PARTS MARKED * IS NOT AVAILABLE

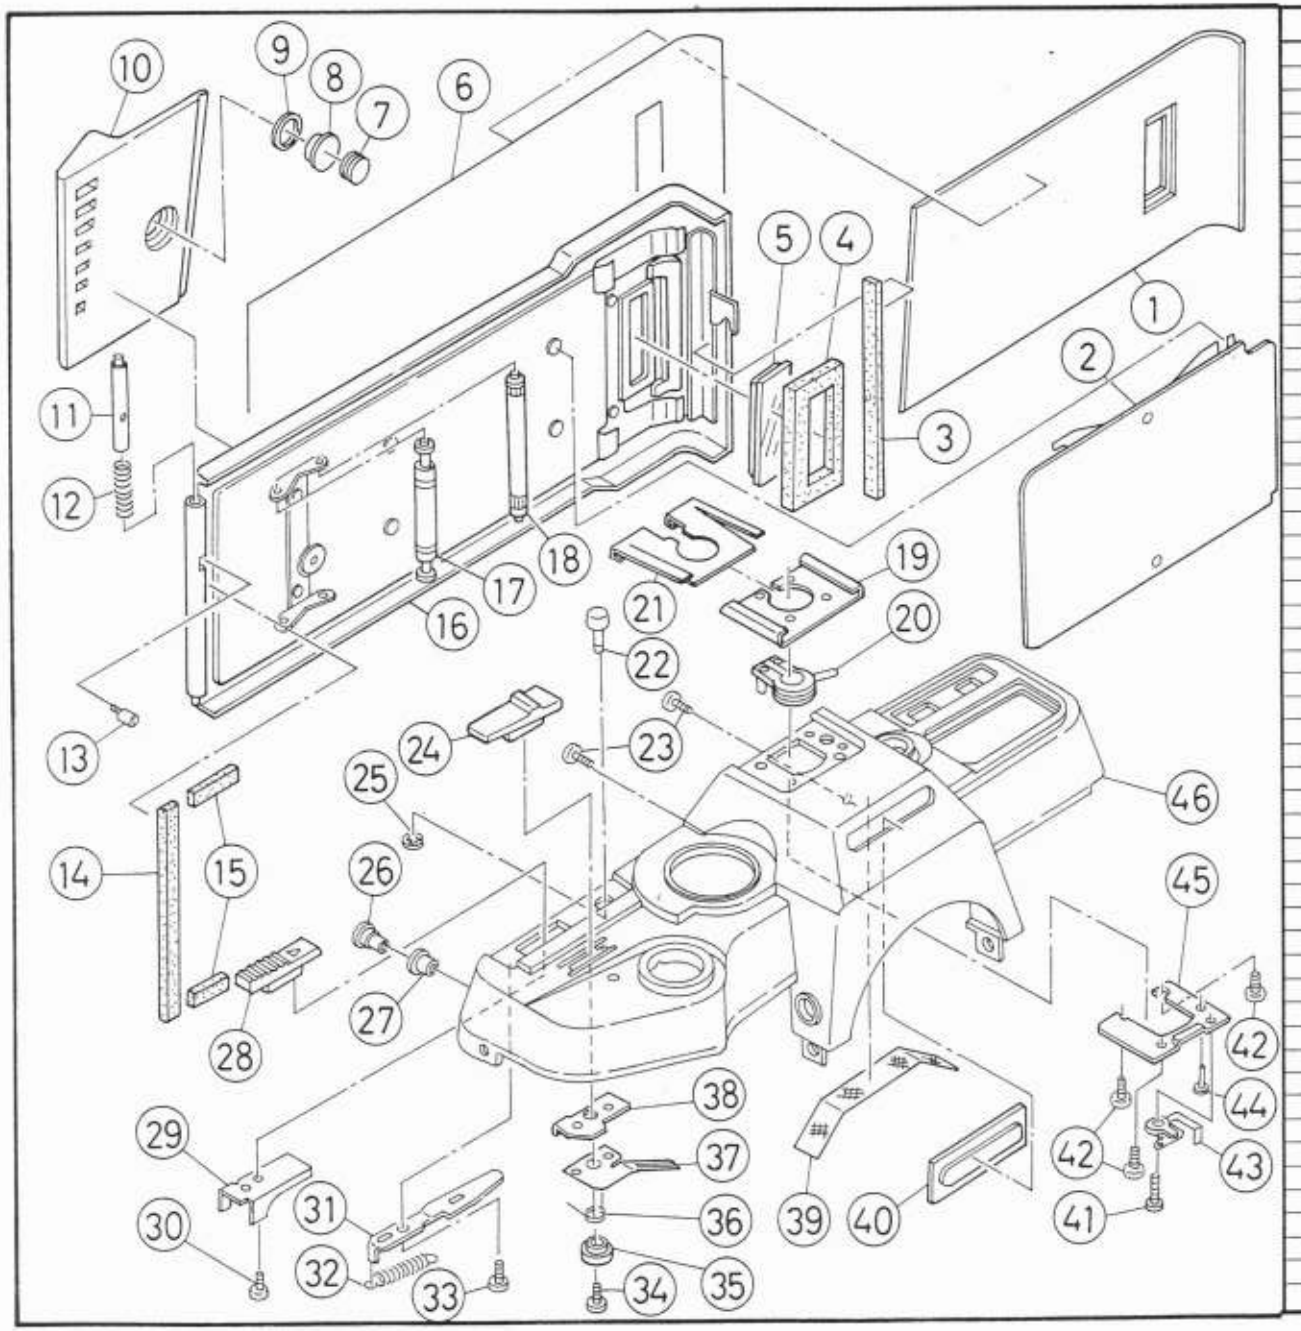

	PARTS NO.	DESCRIPTION	QT'Y
1	174 165	REAR COVER	1
2	174 B92	PRESSURE PLATE ASS'Y	1
3	174 173	LOCK CLAW MOQUETTE	1
4	174 172	FILM CHECK WINDOW MOQUETTE	1
5	174 166	FILM CHECK WINDOW	1
6	174 163	BACK COVER TAPE	1
7	157 022	FILM METER ASS'Y	1
8	157 413	FILM METER WINDOW	1
9	174 183	FILM METER COVER	1
10	174 164	REAR GRIP	1
11	131 131	HINGE SHAFT (2)	1
12	174 177	HINGE SHAFT SPRING	1
13	131 132	HINGE SHAFT REIEASE PIN	1
14	174 173	LOCK CLAW MOQUETTE	1
15	174 174	BACK COVER MOQUETTE	2
16	*	BACK COVER	1
17	174 B93	ROLLER ASS'Y	1
18	174 D81	MAGNET ROLLER ASS'Y	1
19	139 169	ACCESSORY SHOE	1
20	065 461	SHOE CONTACT ASS'Y	1
21	139 178	SHOE DRESS PLATE	1
22	174 206	REWIND RELEASE BUTTON	1
23	61912529	TOP COVER S.S	2
24	174 209	UP/DOWN LEVER	1
25	66101225	E RING (E-12)	1
26	139 165	RELEASE CAP (S)	1
27	139 164	R. SOCKET DECORATING RING	1
28	174 203	REWIND LEVER	1
29	174 204	REWIND LOCK PLATE	1
30	61902526	REWIND LOCK PLATE S.S	1
31	174 205	REWIND LEVER LOCK SPRING	1
32	174 208	REWIND LEVER SPRING	1
33	63902526	REWIND LEVER LOCK SPRING S.S	1
34	64104026	UP/DOWN LEVER S.S	1
35	174 213	UP/DOWN LEVER SPRING SHAFT	1
36	174 212	UP/DOWN LEVER SPRING	1
37	174 211	UP/DOWN SWITCH	1
38	174 210	UP/DOWN LEVER PLATE	1
39	*	ACETATE CLOTH TAPE	1
40	174 202	LIGHTING WINDOW	1
41	61914026	SHOE CONTACT PLATE S.S	1
42	61913022	SHOE CONTACT PLATE S.S	3
43	174 230	SHOE CONTACT PLATE (1) ASS'Y	1
44	139 176	SHOE CONTACT PLATE PIN	1
45	139 180	SHOE REINFORCEMENT PLATE	1
46	*	TOP COVER	1
1-18,			
	174 A20	BACK COVER ASS'Y	1
19-22,24,25,28-46,			
	174 A17	TOP COVER ASS'Y (SEE PAGE NO.1)	1

PARTS MARKED * ARE NOT AVAILABLE

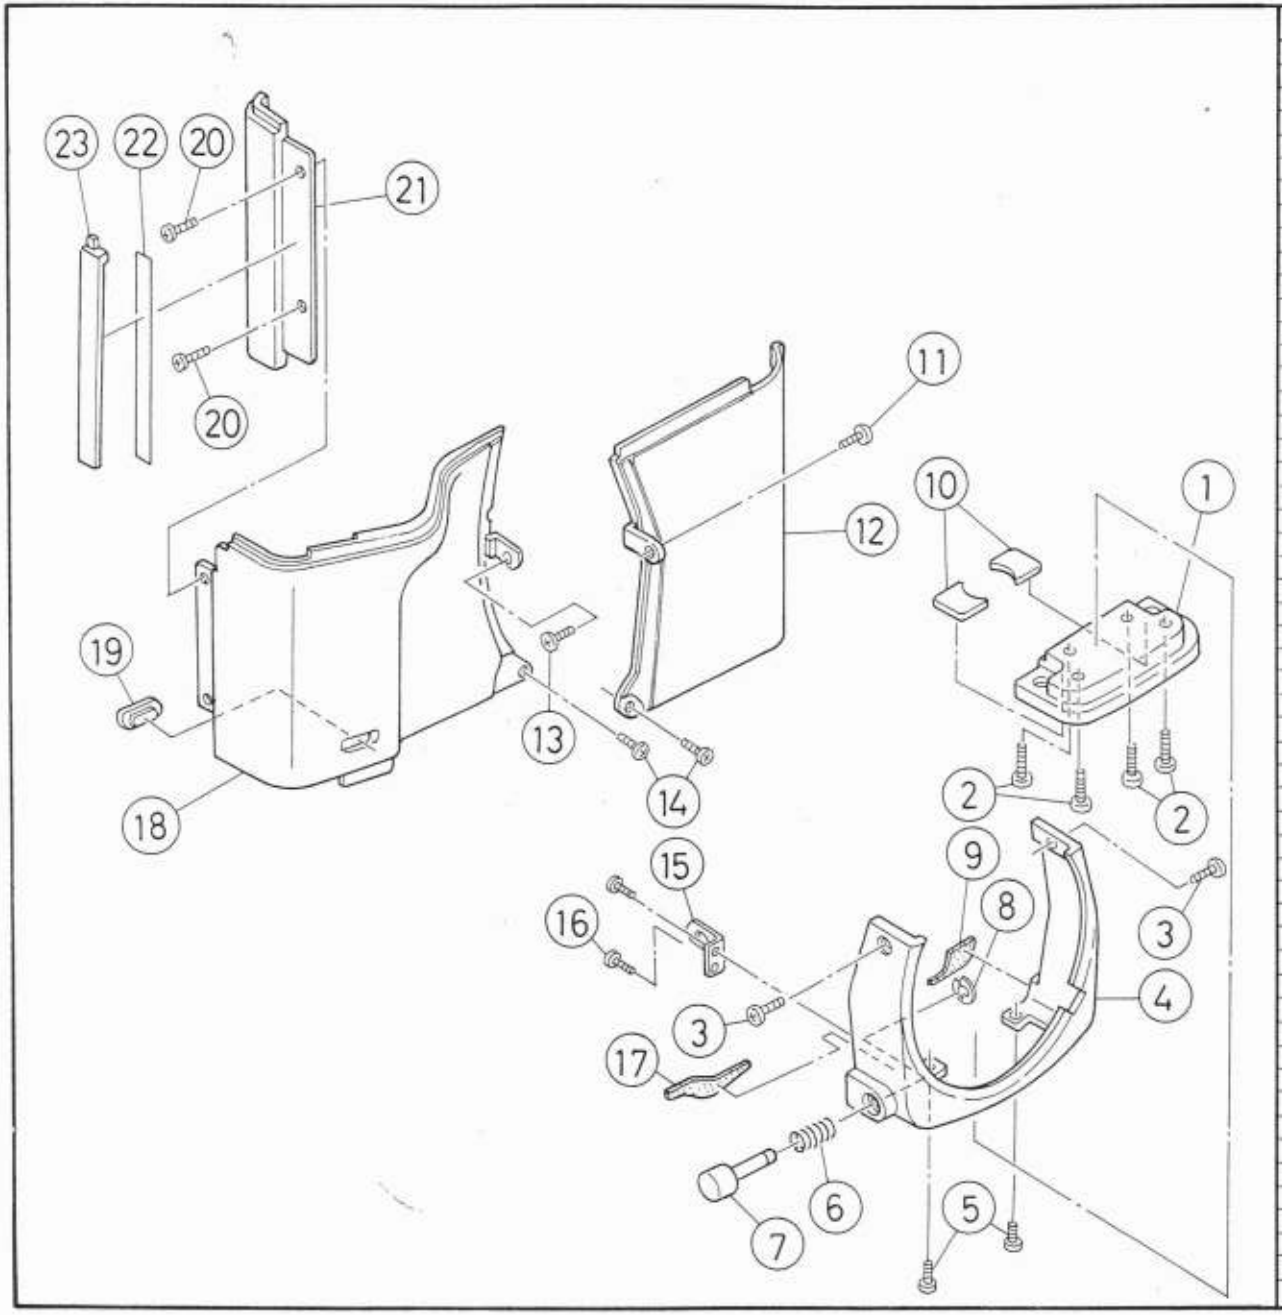

	PARTS NO.	DESCRIPTION	QT'Y
1	174 125	TRIPOD HOLDER	1
2	61925026	TRIPOD HOLDER S.S	4
3	61914029	FRONT COVER S.S	2
4	174 185	FRONT COVER	1
5	61913026	FRONT COVER S.S	2
6	174 187	APERTURE BUTTON SPRING	1
7	174 188	APERTURE BUTTON	1
8	66101225	E RING (E-12)	1
9	174 781	FRONT SEAL (RIGHT)	1
10	137 184	TRIPOD HOLDER SHEET	2
11	61912526	FRONT PLATE S.S	1
12	174 108	FRONT PLATE (RIGHT)	1
13	61912526	FRONT PLATE S.S	1
14	61912526	FRONT PLATE S.S	2
15	174 186	APERTURE BUTTON HOLDER	1
16	63902526	APERTURE BUTTON HOLDER S.S	2
17	174 782	FRONT SEAL (LEFT)	1
18	174 150	FRONT PLATE (LEFT)	1
19	174 151	SELF-TIMER WINDOW	1
20	61913526	SIDE COVER (L) S.S	2
21	174 152	SIDE COVER (L)	1
22	174 162	SIDE COVER TAPE	1
23	174 153	SIDE COVER (S)	1
4,6-9,15-17,			
	174 A19	FRONT COVER ASS'Y	1
18,19,			
	174 A18	FRONT PLATE (LEFT)	1

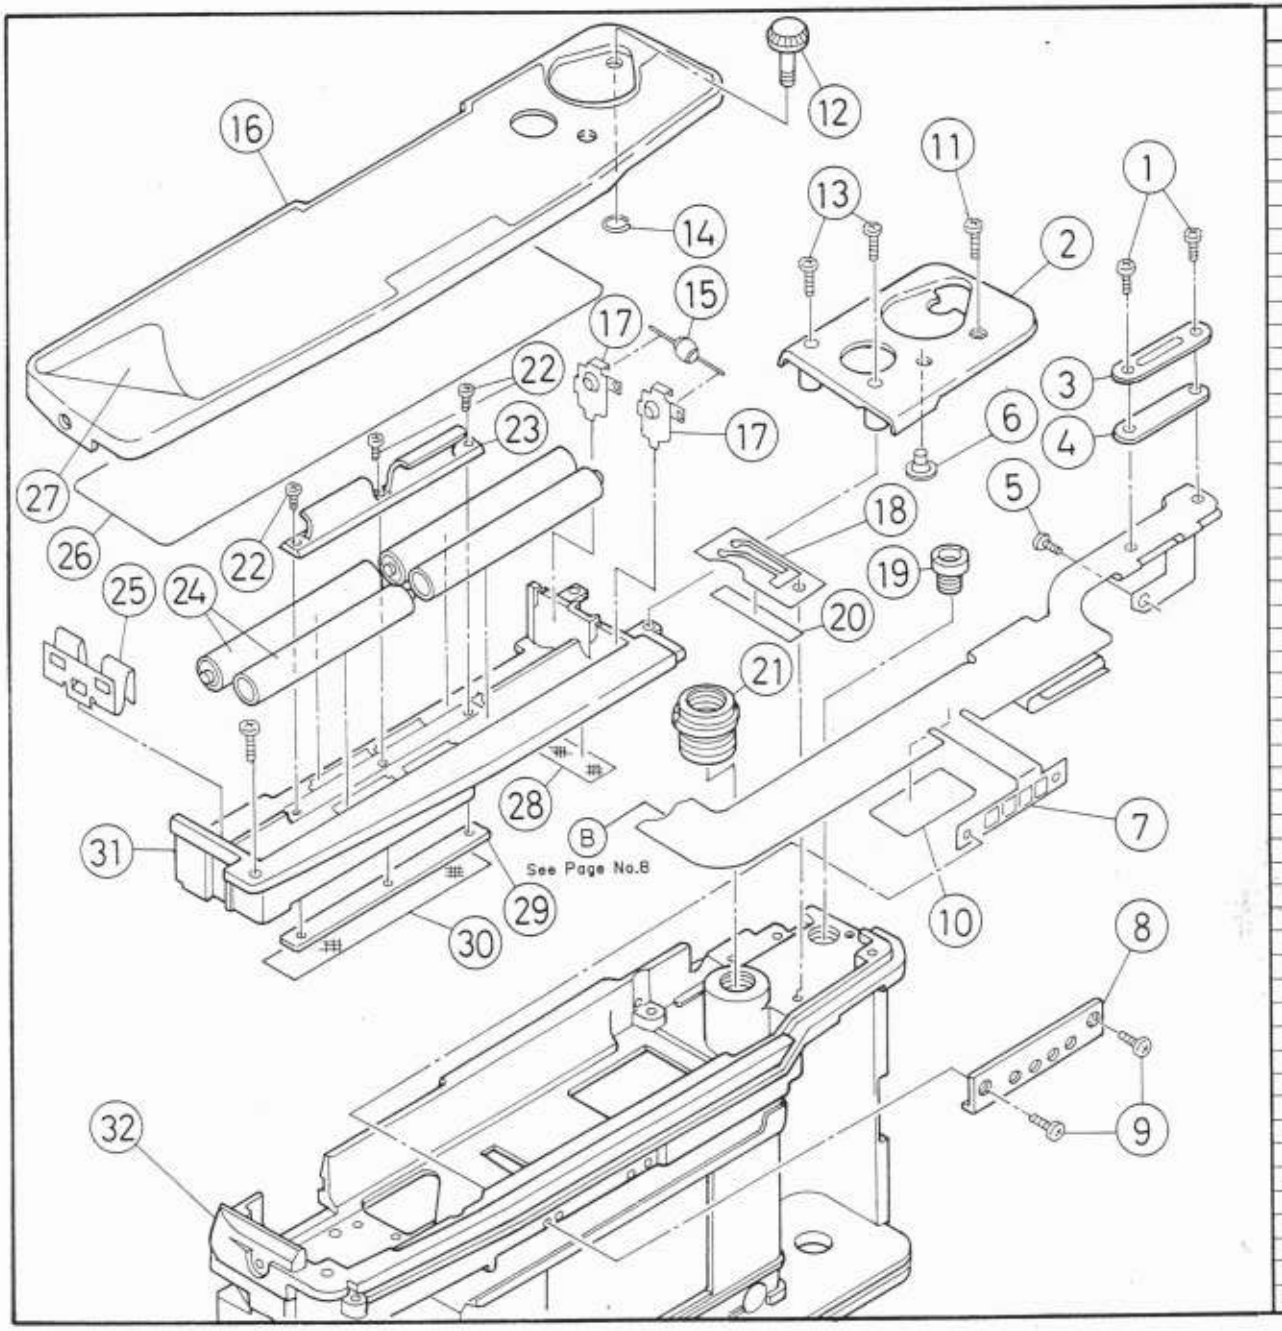

	PARTS NO.	DESCRIPTION	QT'Y
1	63913526	CONTACT RUBBER (S) S.S	2
2	174 130	CELL CASE (S)	1
3	174 992	CONTACT PLATE (S)	1
4	174 993	CONTACT RUBBER (S)	1
5	63912026	FPC-2 S.S	1
6	174 123	RESET BUTTON	1
7	174 A09	FPC-2 ASS'Y (SEE PAGE NO.8)	1
8	174 135	D.B FLEXIBLE COVER	1
9	66001068	D.B FLEXIBLE COVER S.S	2
10	*	DOUBLE ADHESIVE TAPE	1
11	61912529	CELL CASE (S) S.S	1
12	174 198	BOTTOM COVER S.S	1
13	61914026	CELL CASE (S) S.S	2
14	174 199	BOTTOM COVER S.S STOPPER	1
15	137 131	DIODE	1
16	174 191	BOTTOM COVER	1
17	174 132	CELL CONTACT (S)	2
18	174 124	RESET BUTTON FLEXIBLE	2
19	174 127	BOTTOM COVER S.S HOLDER	1
20	*	DOUBLE ADHESIVE TAPE	1
21	174 126	TRIPOD SOCKET	1
22	63903029	CELL HOLDER S.S	3
23	174 129	CELL HOLDER	1
24	*	BATTERY (1.5V AAA-SIZE)	4
25	174 133	CELL CONTACT (L)	1
26	174 190	BOTTOM COVER SEAL	1
27	174 196	BOTTOM COVER PROTECTOR	1
28	*	ACETATE CLOTH TAPE	1
29	174 134	HOLDER PLATE	1
30	*	ACETATE CLOTH TAPE	1
31	174 131	CELL CASE (L)	1
32	*	BODY	1
16,26,27,			
	174 A21	BOTTOM COVER ASS'Y	1
15,17,22,23,25,28-31,			
	174 A13	CELL CASE (L) ASS'Y	1

PARTS MARKED * ARE NOT AVAILABLE

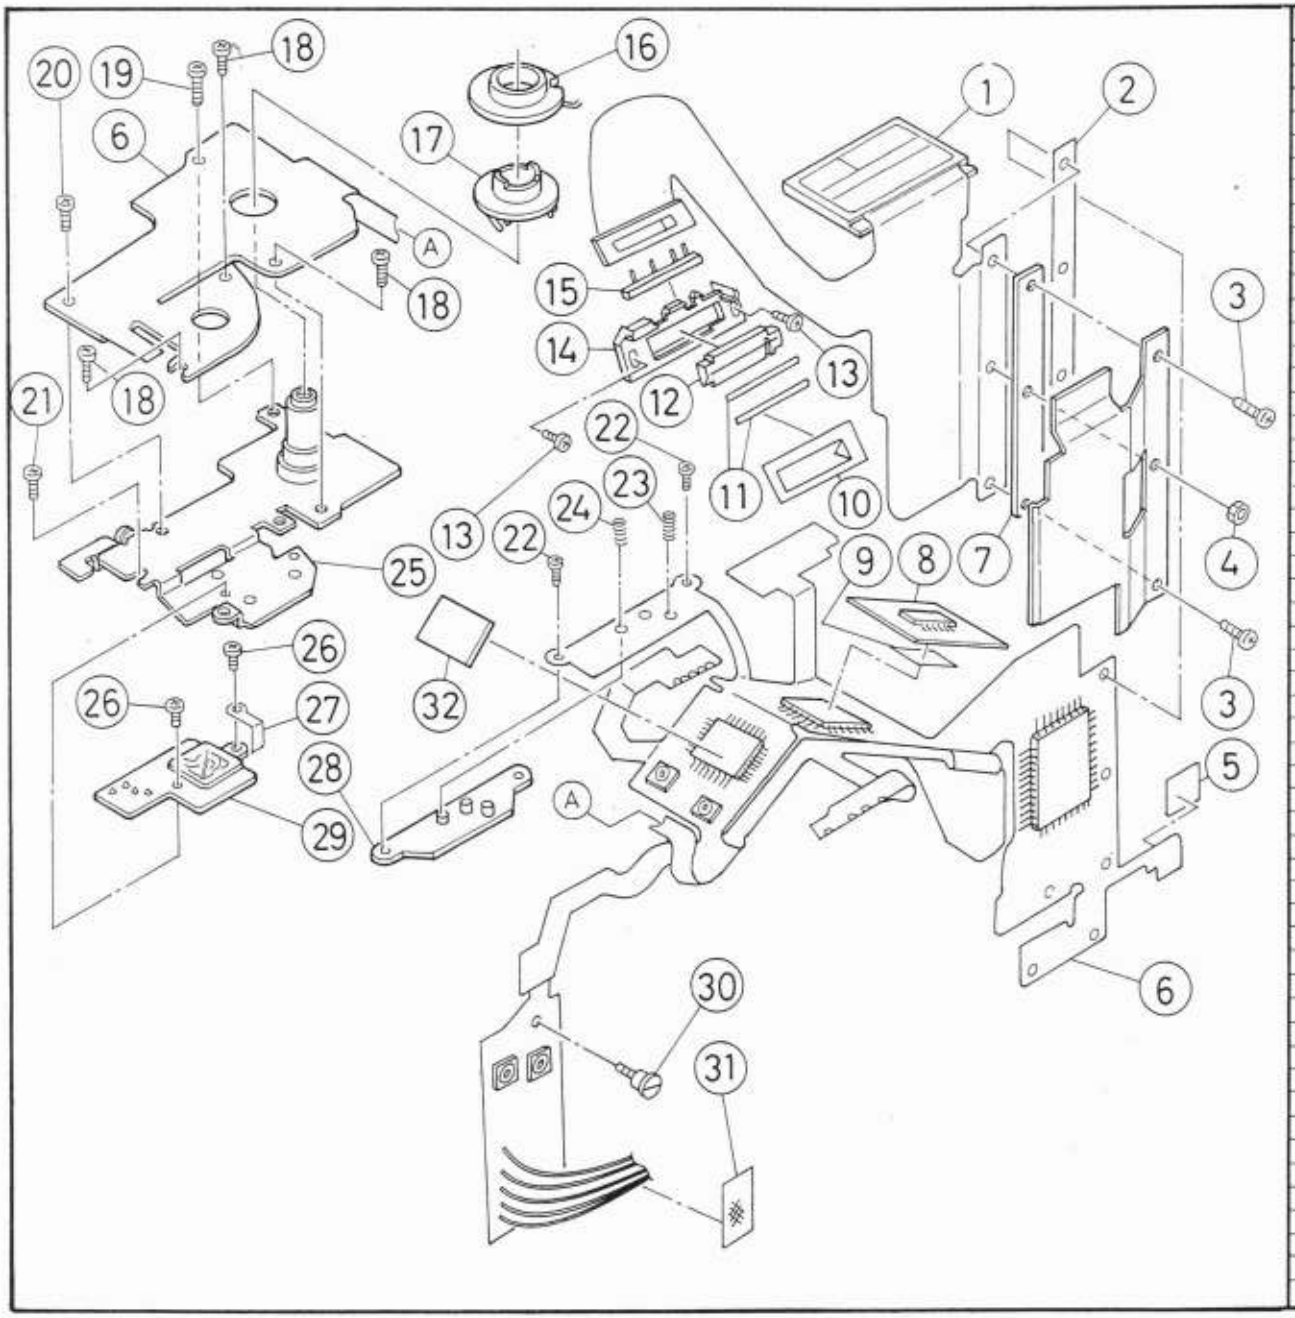

	PARTS NO.	DESCRIPTION	QT'Y
1	174 509	LCD ASS'Y	1
2	174 990	R CONTACT (L)	1
3	63913526	CONTACT PLATE (L) S.S	2
4	66511722	CONTACT PLATE (L) NUT	1
5	*	DOUBLE ADHESIVE TAPE	1
6	*	FPC-1	1
7	174 989	CONTACT RUBBER (L)	1
8	174 A23	RS CIRCUIT BOARD ASS'Y	1
9	*	DOUBLE ADHESIVE TAPE	1
10	174 858	LCD COVER	1
11	159 879	S. LIGHT-PROOF PLATE TAPE	2
12	174 856	TOP PRISM	1
13	63903526	F-LCD HOLDER S.S	2
14	174 854	F-LCD HOLDER	1
15	168 570	LIGHTING PANEL	1
16	174 A16	C. EXP. COMPENSATION SWITCH	1
17	174 A15	EXP. COMPENSATION SWITCH	1
18	63912526	FPC-1 S.S	3
19	63914026	FPC-1 S.S	1
20	61912022	FPC-1 S.S	1
21	63913022	R. BASE PLATE S.S	1
22	61914026	SHOE CONTACT HOLDER S.S	2
23	174 246	SHOE CONTACT SPRING (S)	1
24	174 247	SHOE CONTACT SPRING (L)	1
25	*	RELEASE BASE PLATE	1
26	63911526	RELEASE SWITCH NUIT S.S	2
27	110 928	LEAD WIRE FIXER	1
28	174 245	SHOE CONTACT HOLDER	1
29	174 270	RELEASE SWITCH NUIT	1
30	174 118	FLEXIBLE POST SCREW	1
31	*	ACETATE CLOTH TAPE	1
32	174 A22	B. CIRCUIT BOARD	1
1,11,12,14,15,			
	174 A11	F-LCD HOLDER ASS'Y	1
6,8,9,23,24,			
	174 A10	FPC-1 ASS'Y	1
25,26,29,			
	174 A08	RELEASE BASE PLATE ASS'Y	1

PARTS MARKED * ARE NOT AVAILABLE

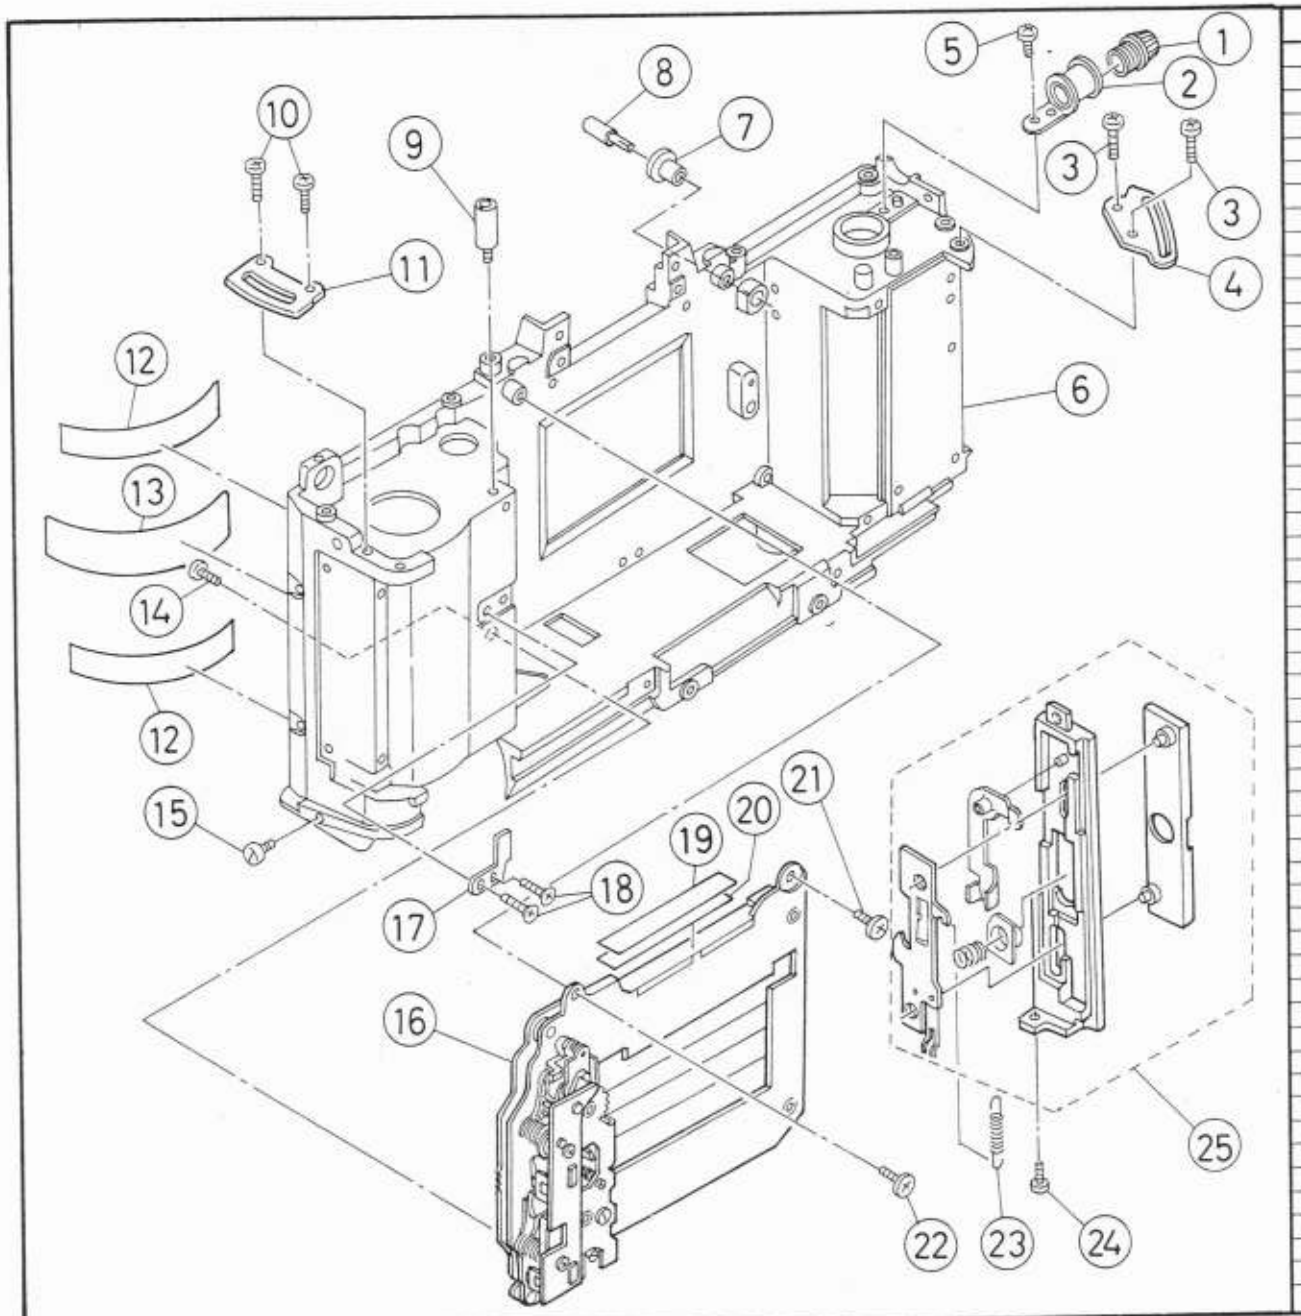

	PARTS NO.	DESCRIPTION	QT'Y
1	139 138	SYNCHRO CAP	1
2	174 B12	SYNCHRO SOCKET ASS'y	1
3	63925026	STRAP HOLDER PLATE S.S	2
4	174 105	STRAP HOLDER PLATE (RIGHT)	1
5	63913022	SYNCHRO SOCKET S.S	1
6	*	BODY	1
7	174 160	F. STOP PIN CASE	1
8	174 158	F. STOP PIN	1
9	174 444	F. FIXER SHAFT (L)	1
10	63925026	STRAP HOLDER PLATE S.S	2
11	174 106	STRAP HOLDER PLATE (LEFT)	1
12	174 448	SLIDE SEAL	2
13	174 445	SLIDE SEAL (2)	1
14	61924029	SHUTTER S.S	1
15	174 122	BOTTOM COVER GUIDE	1
16	174 A02	SHUTTER ASS'Y	1
17	174 944	FC SUPPORTER	1
18	61813026	FC SUPPORTER S.S	2
19	159 883	DUST PROOF TAPE	1
20	352 349	TAPE (2)	1
21	66001001	SHUTTER S.S	1
22	66001065	SHUTTER S.S	1
23	174 144	LOCK PLATE SPRING	1
24	63913526	LOCK PLATE NUIT S.S	1
25	*	LOCK PLATE NUIT ASS'Y	1
23,25,			
	174 A14	LOCK PLATE NUIT ASS'Y	1

PARTS MARKED * ARE NOT AVAILABLE

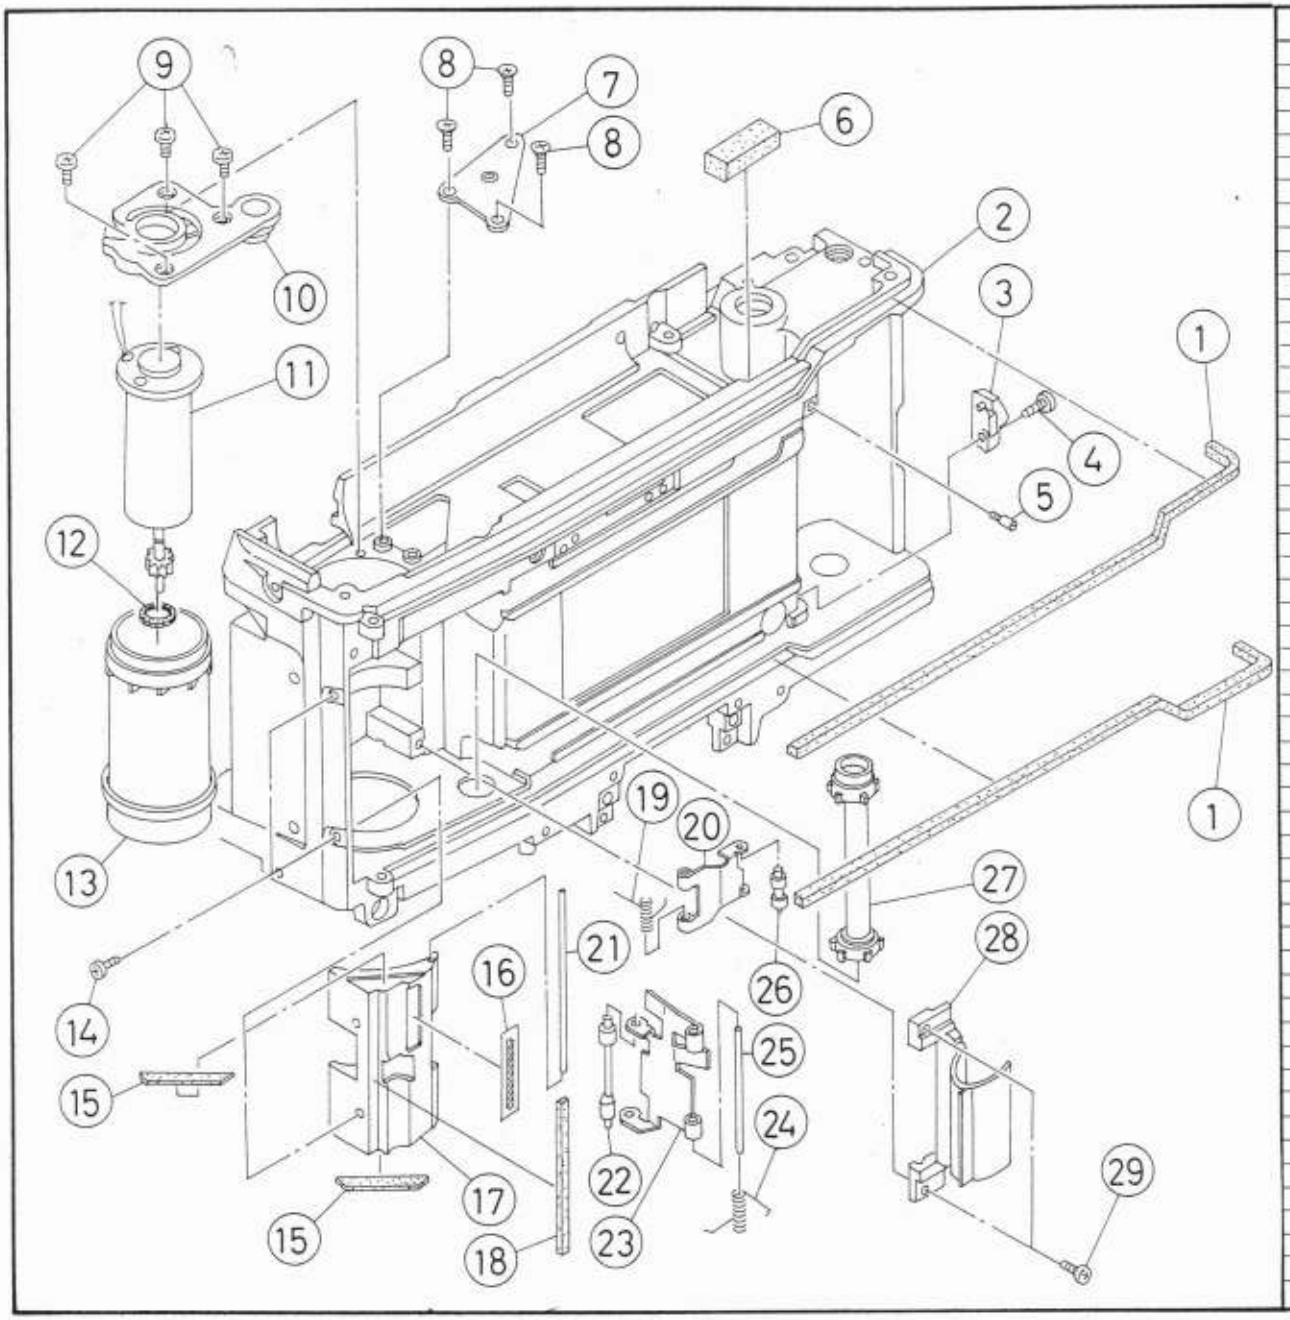

	PARTS NO.	DESCRIPTION	QT'Y
1	174 104	BODY LIGHT-PROOF MOQUTTE	2
2	*	BODY	1
3	174 457	CARTRIDGE GUIDE	1
4	61913029	CARTRIDGE GUIDE S.S	1
5	147 105	FILM GUIDE PIN	1
6	174 783	S. MOQUETTE (1)	1
7	174 A06	M. BASE PLATE (S) ASS'Y	1
8	61813026	M. BASE PLATE (S) S.S	3
9	63911826	SPOOL HOLDER S.S	3
10	174 382	SPOOL HOLDER	1
11	174 340	MOTOR	1
12	174 341	MOTOR CUSHION	1
13	174 381	SPOOL	1
14	69113576	SIDE COVER S.S	2
15	174 149	SIDE MOQUETTE	2
16	174 117	FILM START MARK	1
17	174 154	HINGE COVER	1
18	174 155	HINGE MOQUETTE	1
19	174 451	FILM ROLLER SPRING	1
20	174 450	FILM ROLLER HOLDER	1
21	174 452	FILM ROLLER SHAFT	1
22	174 439	FILM GUIDE ROLLER	1
23	174 440	FILM FIXER	1
24	174 447	FILM GUIDE SPRING	1
25	174 441	FILM FIXER SHAFT	1
26	174 449	FILM ROLLER	1
27	174 371	SPROCKET	1
28	174 446	FILM GUIDE	1
29	63913026	FILM GUIDE S.S	2
15-21,26,			
	174 B17	HINGE COVER ASS'Y	1
22-25,28,			
	174 B11	FILM FIXER ASS'Y	1

PARTS MARKED * IS NOT AVAILABLE

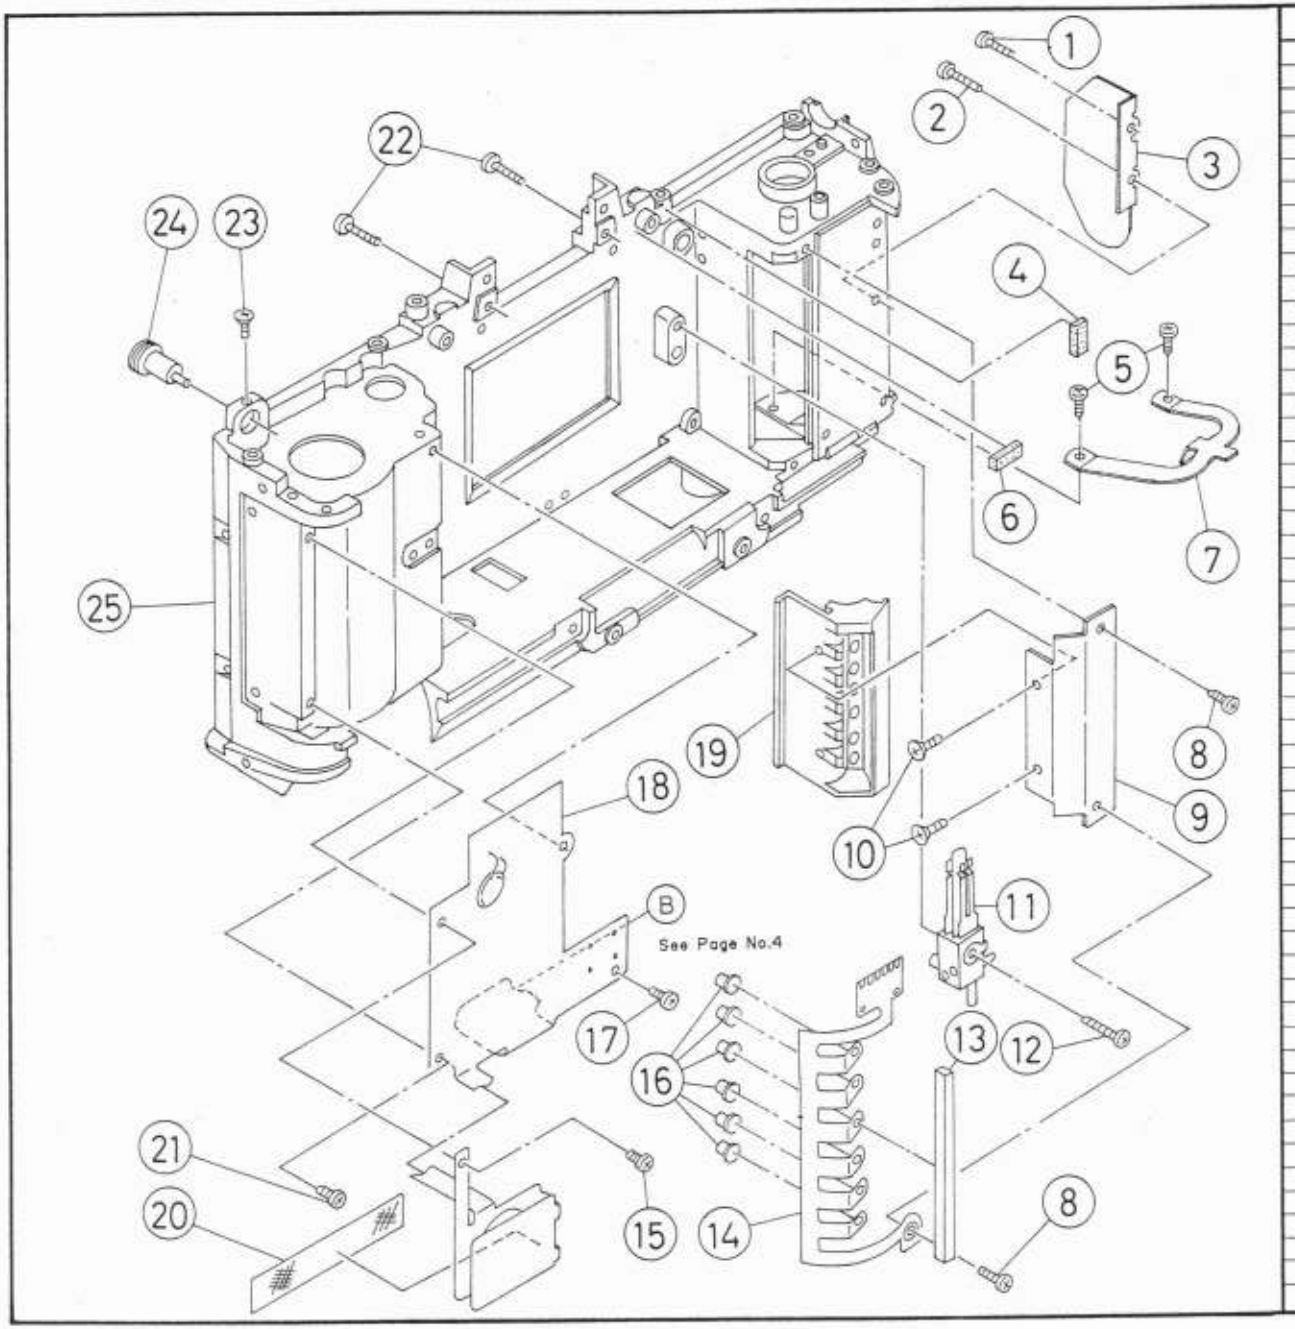

	PARTS NO.	DESCRIPTION	QT'Y
1	61912229	CARTRIDGE HOLDER S.S	1
2	61917529	CARTRIDGE HOLDER S.S	1
3	174 455	CARTRIDGE HOLDER	1
4	174 780	S. MOQUETTE	1
5	61912029	CARTRIDGE LIFTER S.S	2
6	174 784	S. MOQUETTE (2)	1
7	174 456	CARTRIDGE LIFTER	1
8	61913022	DX ASS'Y S.S	2
9	174 464	DX FIXER	1
10	61812226	FPC-3 S.S	2
11	174 B15	FILM STOP SWITCH ASS'Y	1
12	61916022	FILM STOP SWITCH S.S	1
13	174 463	DX RUBBER	1
14	174 508	FPC-3 (DX)	1
15	63912526	FPC-2 S.S	1
16	174 462	DX PIN	6
17	63912022	FPC-2 S.S	1
18	174 A09	FPC-2 ASS'Y (SEE PAGE NO.4)	1
19	174 460	DX CASE	1
20	*	ACETATE CLOTH TAPE	1
21	63912022	FPC-2 S.S	1
22	63927026	MIRROR BOX S.S	2
23	61812022	R. SOCKET S.S	1
24	174 B13	R. SOCKET ASS'Y	1
25	*	BODY	1
14,16,			
	174 C11	FPC-3 ASS'y	1
9,10,13,14,16,19,			
	174 B14	DX ASS'Y	1

PARTS MARKED * ARE NOT AVAILABLE

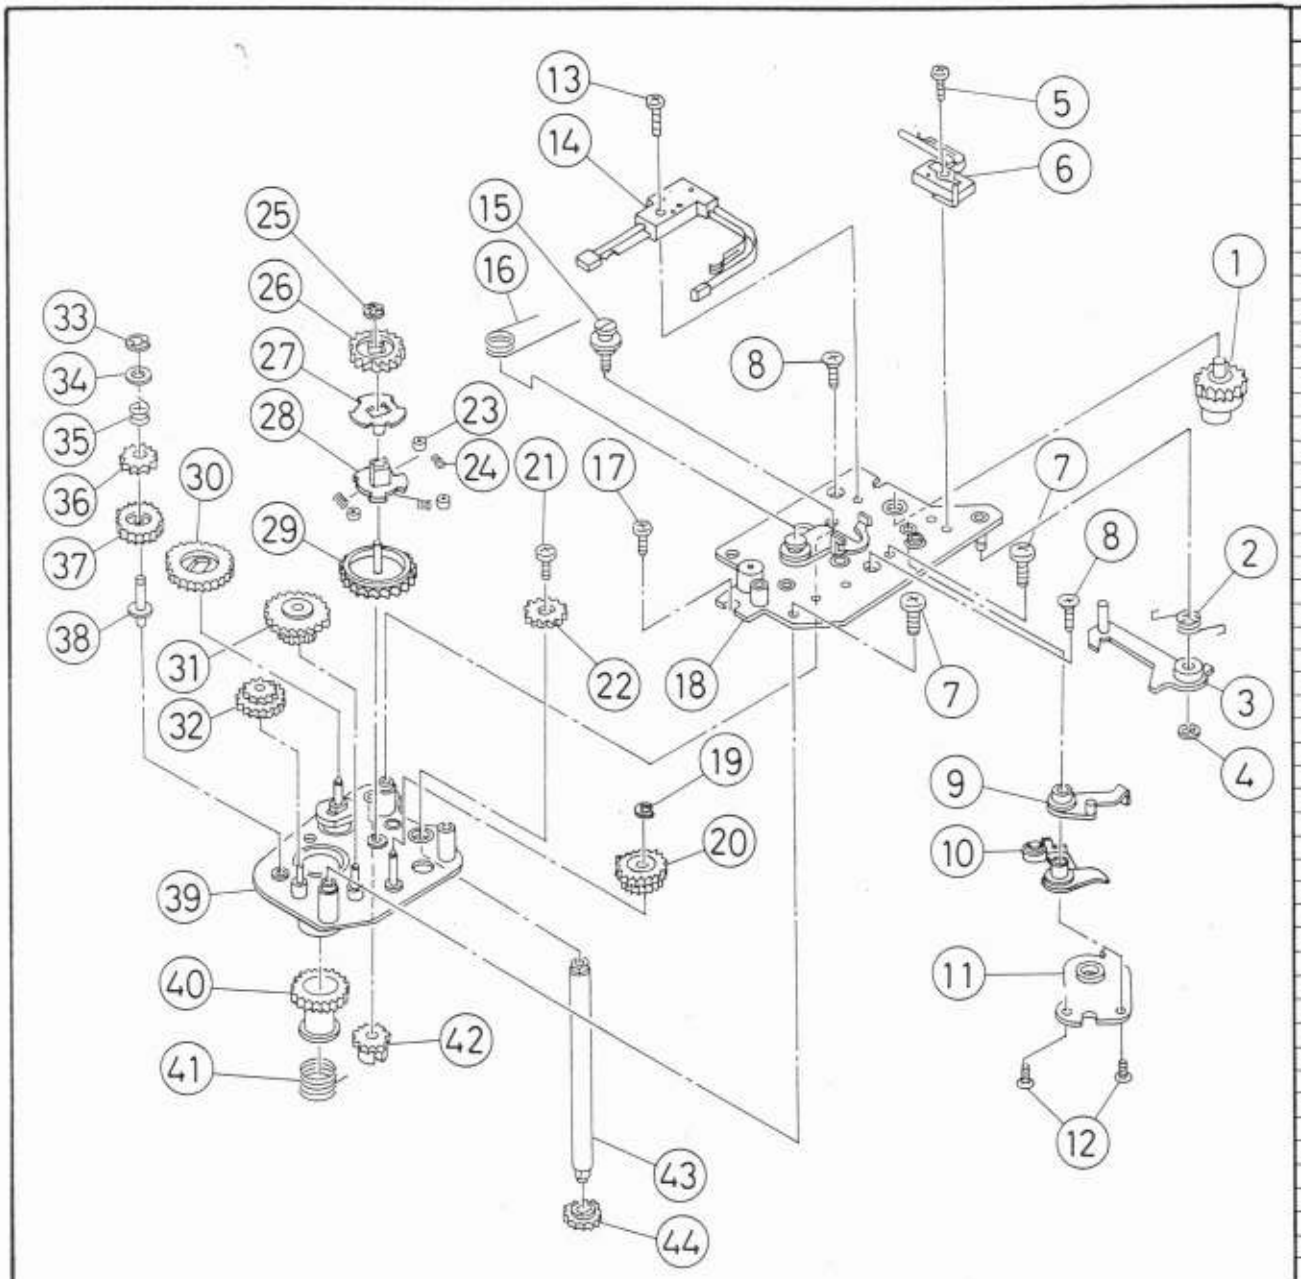

	PARTS NO.	DESCRIPTION	QT'Y
1	174 B28	F. SET CAM	1
2	174 418	TIMING SWITCH LEVER SPRING	1
3	174 B29	TIMING SWITCH LEVER ASS'Y	1
4	66101525	E RING (E-15)	1
5	63904022	TIMING SWITCH S.S	1
6	174 C22	TIMING SWITCH ASS'Y	1
7	66001042	S. BASE PLATE (L) S.S	2
8	61813026	S. BASE PLATE ASS'Y S.S	2
9	174 B30	S. SET LEVER ASS'Y	1
10	174 B31	F. SET LEVER ASS'Y	1
11	174 B32	F. SET LEVER PLATE ASS'Y	1
12	61803526	F. SET LEVER PLATE S.S	2
13	63914026	RW SWITCH S.S	1
14	174 C21	RW SWITCH ASS'Y	1
15	174 426	R. LEVER SHAFT (L)	1
16	174 428	RW LEVER SPRING	1
17	63913022	S. BASE PLATE S.S	1
18	174 B27	S. BASE PLATE (L) ASS'Y	1
19	66101225	E RING (E-12)	1
20	174 B23	S. GEAR-4 ASS'Y	1
21	66001042	M. PINION S.S	1
22	174 421	M. PINION	1
23	137 339	CLUTCH ROLLER	3
24	137 340	ROLLER SPRING	3
25	66101225	E RING (E-12)	1
26	174 358	CLUTCH GEAR (S)	1
27	137 341	ROLLER HOLDER PLATE	1
28	137 356	WINDING CLUTCH PLATE	1
29	174 353	CLUTCH GEAR (L)	1
30	174 361	R. CLUTCH GEAR (S)	1
31	174 B26	S. GEAR-3 ASS'Y	1
32	174 B25	S. GEAR-2 ASS'Y	1
33	66101525	E RING (E-15)	1
34	174 342	FRICTION WASHER	1
35	174 343	FRICTION SPRING	1
36	174 346	S. GEAR (1-S)	1
37	174 345	S. GEAR (1-L)	1
38	174 344	S. GEAR-1 SHAFT	1
39	174 B21	S. BASE PLATE (S) ASS'Y	1
40	174 378	SPOOL GEAR	1
41	174 379	SPOOL SPRING	1
42	174 370	SPROCKET GEAR	1
43	174 422	M. PINION SHAFT	1
44	174 616	M. GEAR-1	1
23-29,			
	174 B22	WINDING CLUTCH GEAR ASS'Y	1
33-38,			
	174 B24	S. FRICTION GEAR ASS'Y	1
40,41			
	174 A03	SPOOL FRICTION ASS'Y	1
1-4,7,9-12,15,16,18-39,43,			
	174 A04	S. BASE PLATE ASS'Y	1

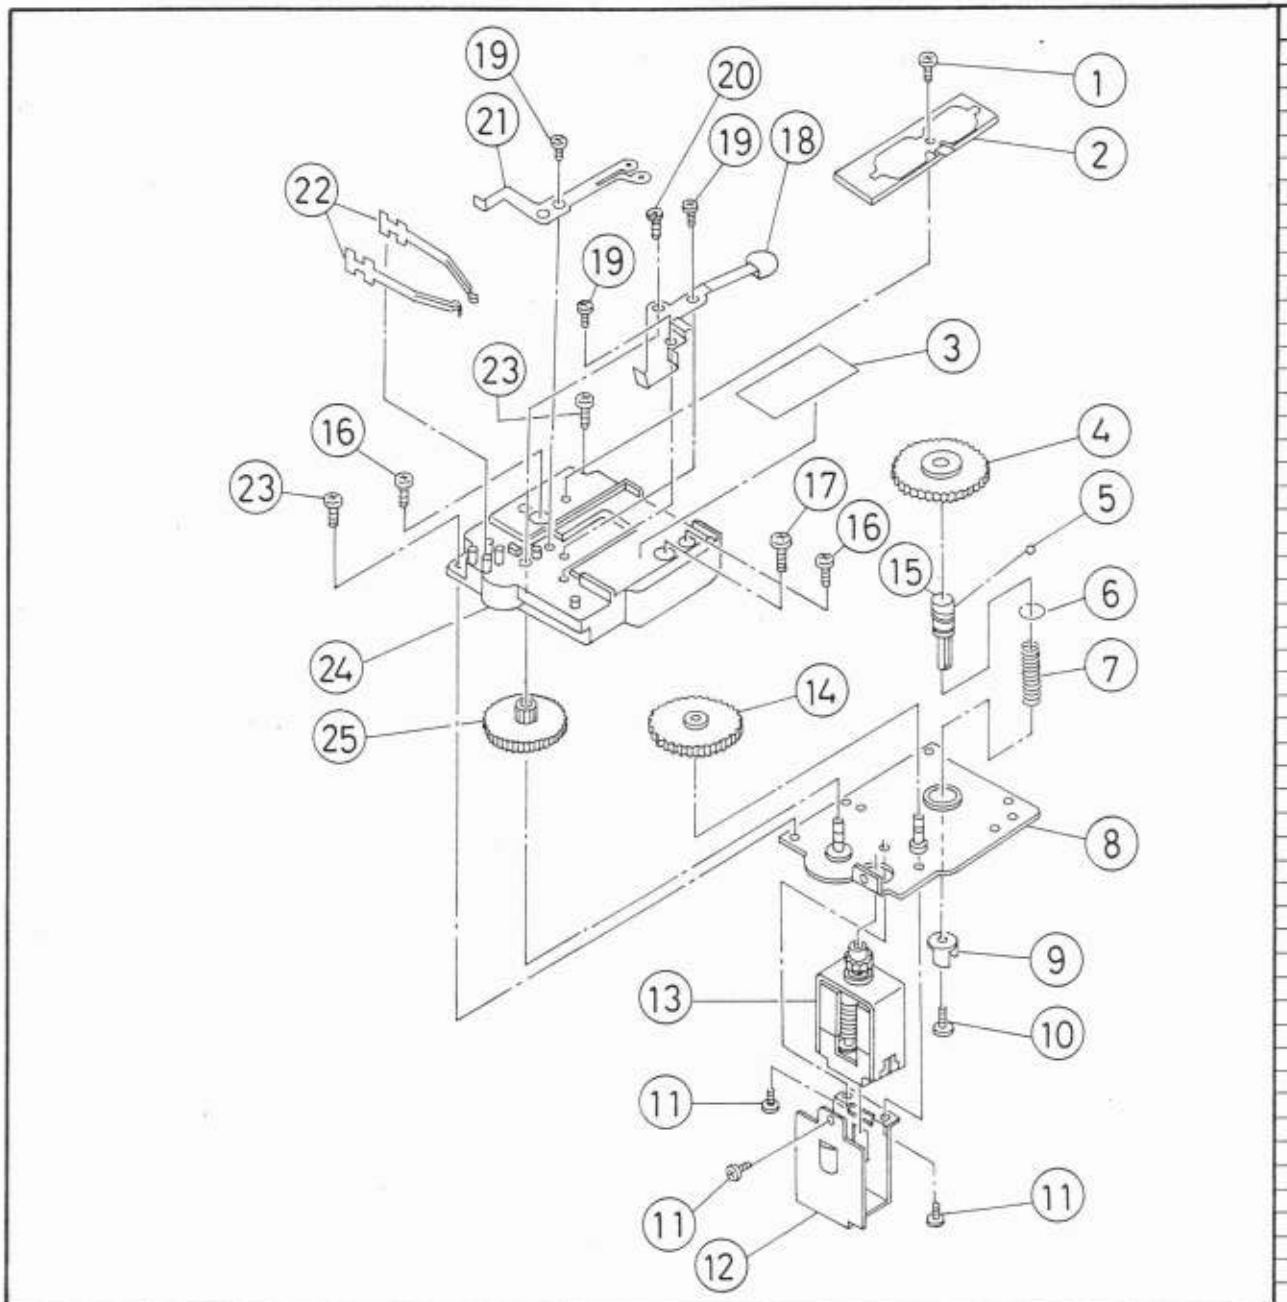

	PARTS NO.	DESRIPTION	QT'Y
1	63912526	MODE SWITCH NUIT S.S	1
2	174 470	MODE SWITCH UNIT	1
3	174 985	LCD TAPE	1
4	174 971	RM SHAFT GEAR	1
5	66701220	STEEL BALL (ø1.2)	1
6	174 975	RM SHAFT CLIP	1
7	174 978	RM SHAFT SPRING	1
8	★	RM BASE PLATE ASS'Y	1
9	174 974	RM SHAFT (S)	1
10	66001050	RM SHAFT (S) S.S	1
11	63901526	RM HOLDER S.S	3
12	174 961	RM HOLDER	1
13	174 B64	REWIND MOTOR ASS'Y	1
14	174 970	RM GEAR (S)	1
15	174 973	RM SHAFT (L)	1
16	63913526	REWIND MOTOR CASE S.S	2
17	63913522	REWIND NUIT S.S	1
18	174 982	REWIND MOTOR SWITCH (L)	1
19	66001038	REWIND MOTOR SWITCH S.S	3
20	63912022	REWIND MOTOR CASE S.S	1
21	174 983	REWIND MOTOR SWITCH (S)	1
22	174 986	MODE CONTACT	2
23	63913526	REWIND NUIT S.S	2
24	174 981	REWIND MOTOR CASE	1
25	174 969	RM GEAR (L)	1
6,7,9,10,15,			
	174 B62	RM SHAFT ASS'Y	1
4-16,18-22,24,25,			
	174 A07	REWIND NUIT ASS'Y	1

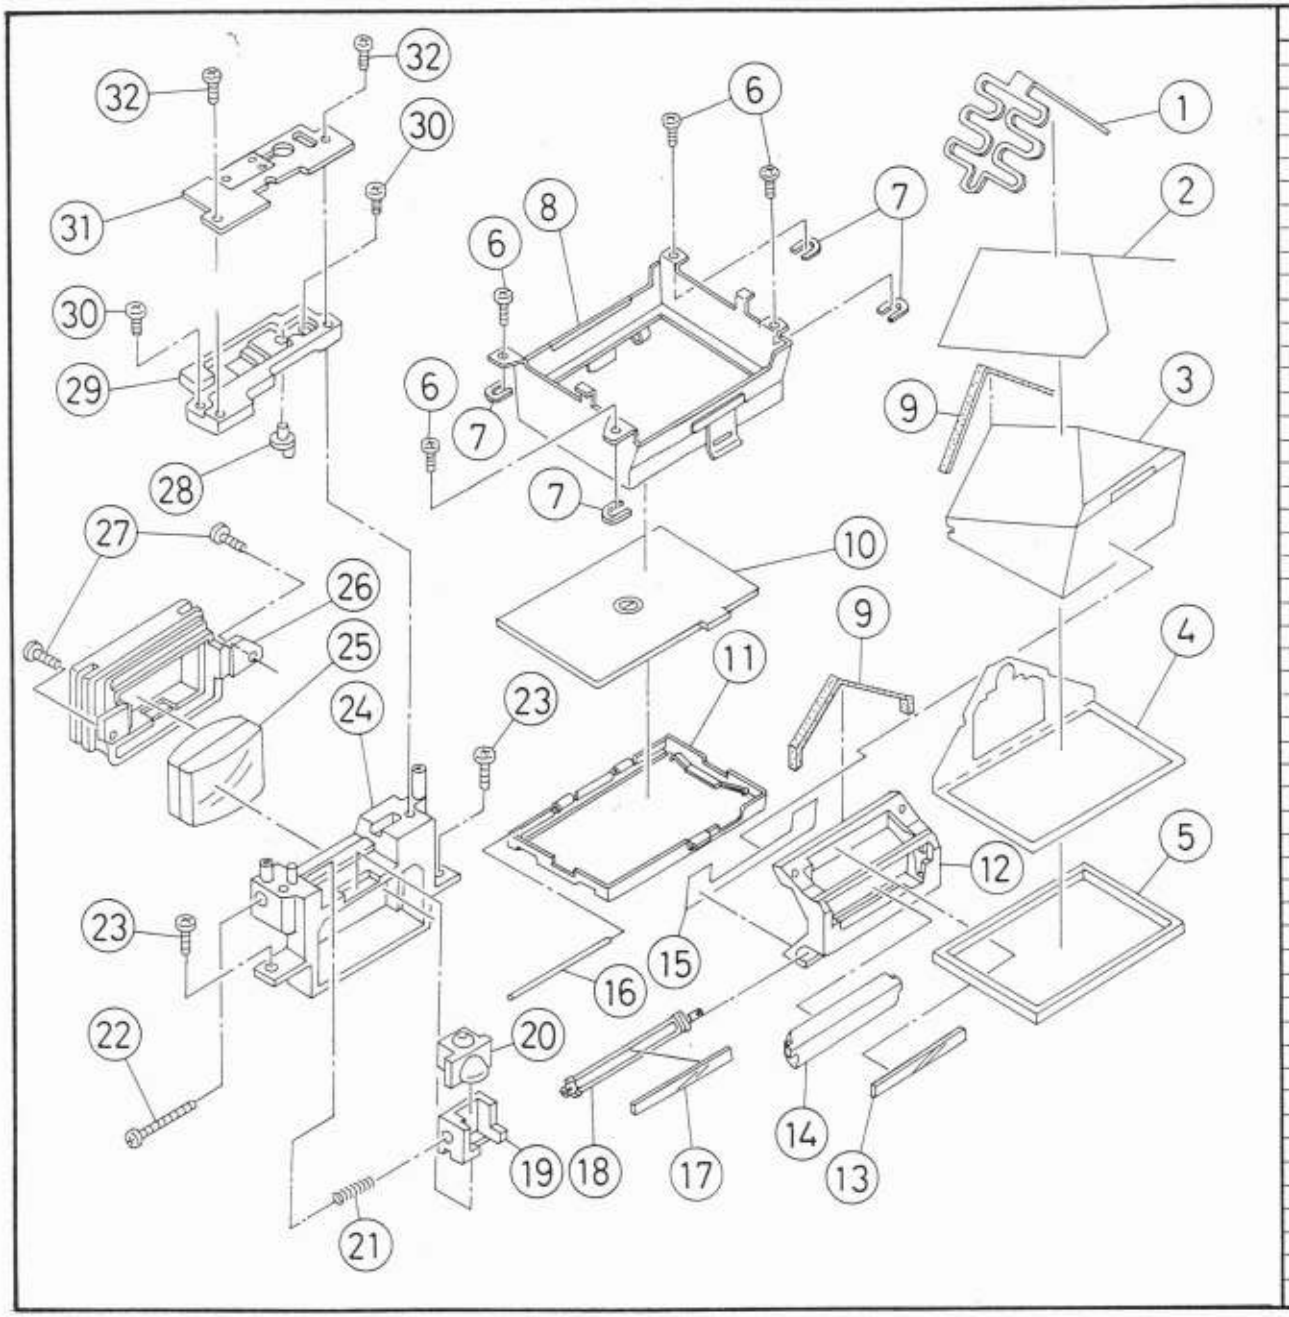

	PARTS NO.	DESCRIPTION	QT'Y
1	159 862	PENTA PRISM FIXER	1
2	174 842	PENTA PRISM COVER	1
3	174 841	PENTA PRISM	1
4	174 843	FINDER MASK FRAME	1
5	174 845	PENTA SPACER	1
6	63914026	PENTA PRISM HOLDER S.S	4
		SELECT WASHER	
7	139 874	FOCUS ADJUST WASHER (t0.3)	4
	139 840	FOCUS ADJUST WASHER (t0.4)	4
	139 871	FOCUS ADJUST WASHER (t0.5)	4
	139 894	FOCUS ADJUST WASHER (t0.6)	4
	139 898	FOCUS ADJUST WASHER (t0.7)	4
8	174 C67	PENTA PRISM HOLDER ASS'Y	1
9	139 858	PENTA DUST-PROOF MOQUETTE	2
10	174 849	FOCUSING GLASS	1
11	174 860	PG HOLDER	1
12	174 850	F. MIRROR FRAME	L
13	178 852	F. MIRROR	1
14	174 851	F. PRISM	1
15	174 870	FRAME TAPE (L)	1
16	174 862	PG HINGE SHAFT	1
17	174 852	F. MIRROR	1
18	174 859	F. MIRROR ADJUSTER	1
19	174 248	PRISM BASE	1
20	168 886	EX PRISM	1
21	174 252	EX ADJUSTER SPRING	1
22	66001061	EX ADJUSTER SCREW	1
23	61914026	EYE-PIECE HOLDER S.S	2
24	174 254	EYE-PIECE HOLDER	1
25	168 A78	EYE-PIECE LENS	1
26	174 255	EYE-PIECE FRAME	1
27	61914026	EYE-PIECE FRAME S.S	2
28	174 253	EX ADJUSTER	1
29	174 249	EX ADJUSTER BASE	1
30	69114576	EX ADJUSTER BASE S.S	2
31	174 C70	EX BOARD ASS'Y	1
32	69113576	EX BOARD S.S	2
17,18,			
	174 E61	F. MIRROR ADJUSTER ASS'Y	1
3,12-15,17,18,			
	174 C68	PENTA PRISM ASS'Y	1
			1
19,20,			
	174 D71	EX PRISM ASS'Y	1
19-22,24,25,			
	174 C69	EYE-PIECE HOLDER ASS'Y	1
19-22,24,25,28-32,			
	174 B53	EYE-PIECE ASS'Y	1
1-25,28-32,			
	174 A05	MIRROR BOX ASS'Y	1
		(SEE PAGE NO.12,13,14,15)	

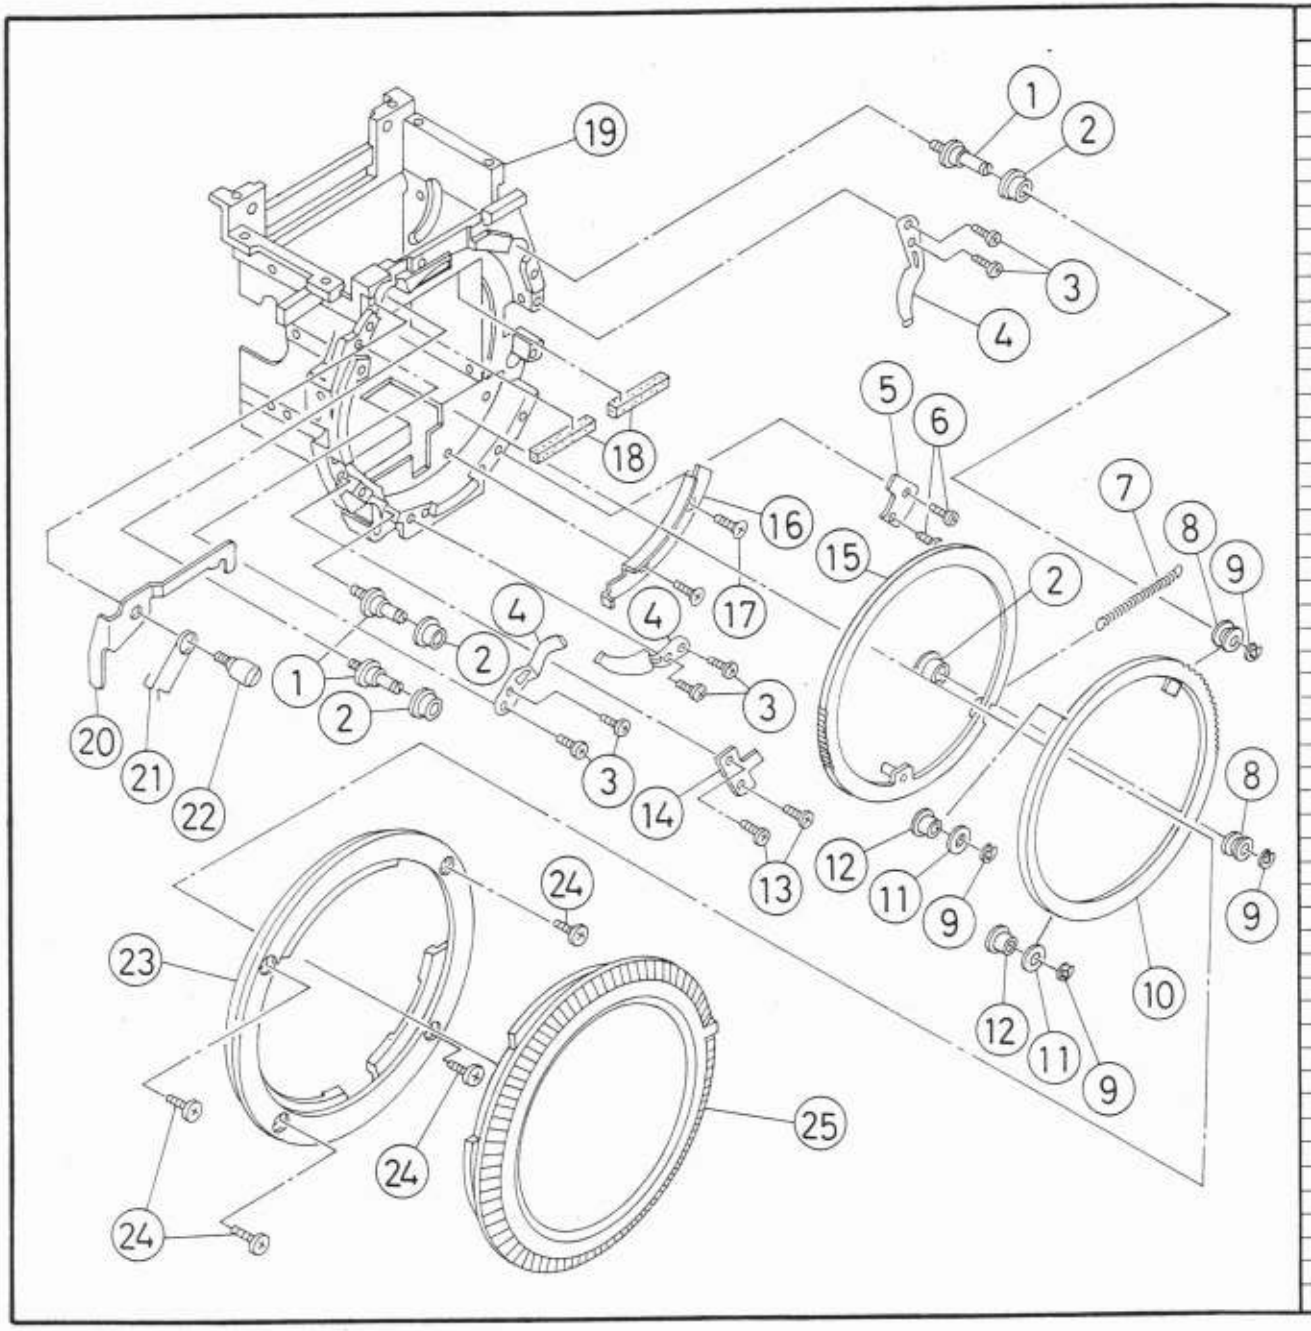

	PARTS NO.	DESCRIPTION	QT'Y
1	174 706	FS RING SHAFT-1	3
2	174 728	FC ROLLER (M)	4
3	61913026	MOUNT SPRING S.S	6
4	139 812	MOUNT SPRING	3
5	139 813	MOUNT STOPPER	1
6	61913026	MOUNT STOPPER S.S	2
7	174 721	FC DRIVING SPRING	1
8	174 713	FS ROLLER	2
9	66101225	E RING (E-12)	4
10	174 705	FS RING	1
11	174 714	FS RING WASHER	2
12	174 709	FS ROLLER (L)	2
13	61912026	FS STOPPER S.S	2
14	174 710	FS STOPPER	1
15	174 C41	FC RING ASS'Y	1
16	174 720	SP GUARD	1
17	61801826	SP GUARD S.S	2
18	174 803	MIRROR CUSHION	2
19	*	MIRROR BOX	1
20	139 815	LOCK LEVER	1
21	174 731	LOCK LEVER SPRING	1
22	139 816	LOCK LEVER SHAFT	1
23	142 810	BODY MOUNT	1
24	131 177	BODY MOUNT S.S	4
25	*	BODY CAP	1
1-24,	174 A05	MIRROR BOX ASS'Y (SEE PAGE NO.11,13,14,15)	1

PARTS MARKED * ARE NOT AVAILABLE

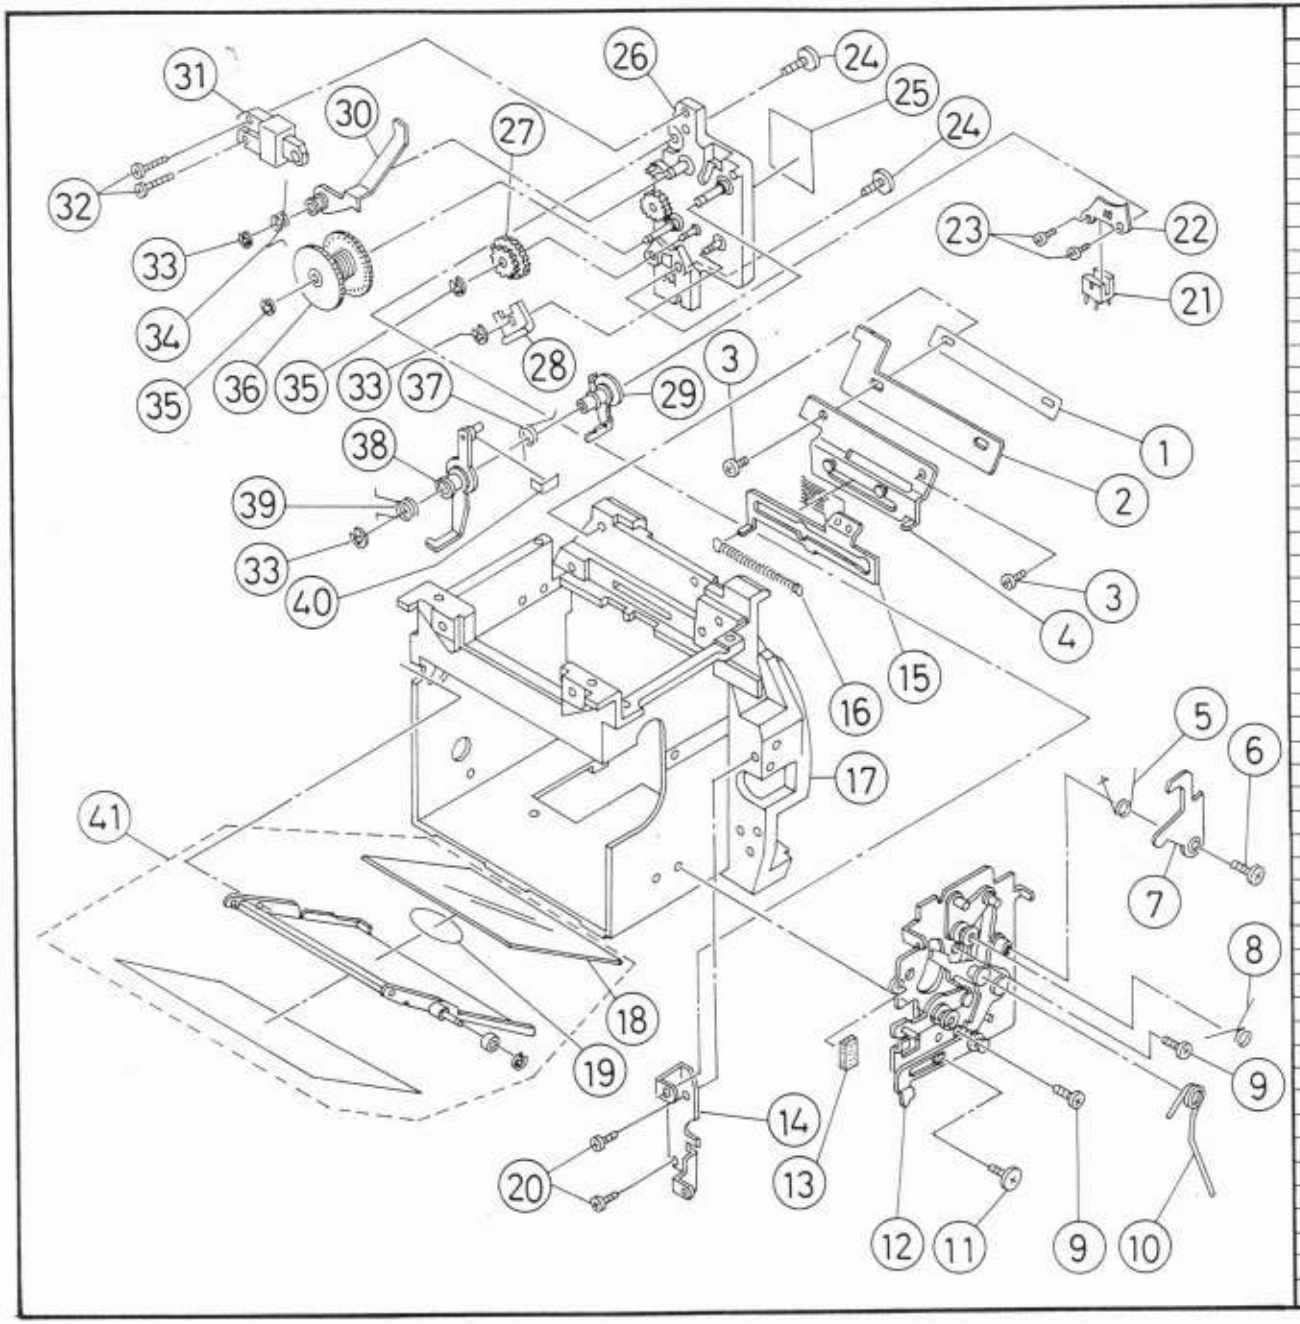

	PARTS NO.	DESCRIPTION	QT'Y
1	174 750	FS PLATE MYLER	1
2	174 747	FS CODE BASE ASS'Y	1
3	61912022	FS CODE PLATE S.S	2
4	174 C58	FS CODE PLATE ASS'Y	1
5	174 677	S. LEVER HOOK SPRING	1
6	66001042	S. LEVER HOOK S.S	1
7	174 C49	S. LEVER HOOK ASS'Y	1
8	174 661	S. LEVER SPRING	1
9	61912026	MU BASE PLATE S.S	2
10	174 670	MU LEVER SPRING	1
11	66001033	MU LEVER (M) S.S	1
12	*	MU BASE PLATE	1
13	174 784	S. MOQUETTE (2)	1
14	174 943	FC. UNIT HOLDER	1
15	174 C59	FS PLATE ASS'Y	1
16	141 811	OPEN APERTURE SIGNAL SPRING	1
17	*	MIRROR BOX	1
18	174 801	MIRROR	1
19	139 774	MIRROR ADHESIVE TAPE	1
20	63913026	FC UNIT HOLDER S.S	2
21	174 C66	PHOTO-COUPLER ASS'Y	1
22	174 941	FC SLIT (F)	1
23	61902526	FC SLIT (F) S.S	1
24	66001039	FC UNIT S.S	2
25	*	MENDING TAPE	1
26	*	FC BASE PLATE ASS'Y	1
27	159 742	REDUCTION GEAR	1
28	159 744	ANCHOR	1
29	174 C64	FC SET LEVER ASS'Y	1
30	174 C62	FC CHARGE LEVER	1
31	174 942	FC MAGNET	1
32	66001087	FC MAGNET S.S	1
33	66101225	E RING (E-12)	1
34	174 931	FC CHARGE SPRING	1
35	66100825	E RING (E-8)	1
36	174 C63	FC SLIT ASS'Y	1
37	174 928	FC SET SPRING	1
38	174 C65	FC STOPPER ASS'Y	1
39	174 924	FC STOPPER LEVER SPRING	1
40	168 853	MOVABLE PIECE TAPE	1
41	174 B44	MIRROR FRAME ASS'Y	1
1-4,15,16,			
	174 B49	FS CODE BASE PLATE ASS'Y	1
5-8,10-12,			
	174 B45	MU BASE PLATE ASS'Y	1
21-23,25-40,			
	174 B50	FC UNIT ASS'Y	1
1-41,			
	174 A05	MIRROR BOX ASS'Y	1
		(SEE PAGE NO.11,12,14,15)	

PARTS MARKED * ARE NOT AVAILABLE

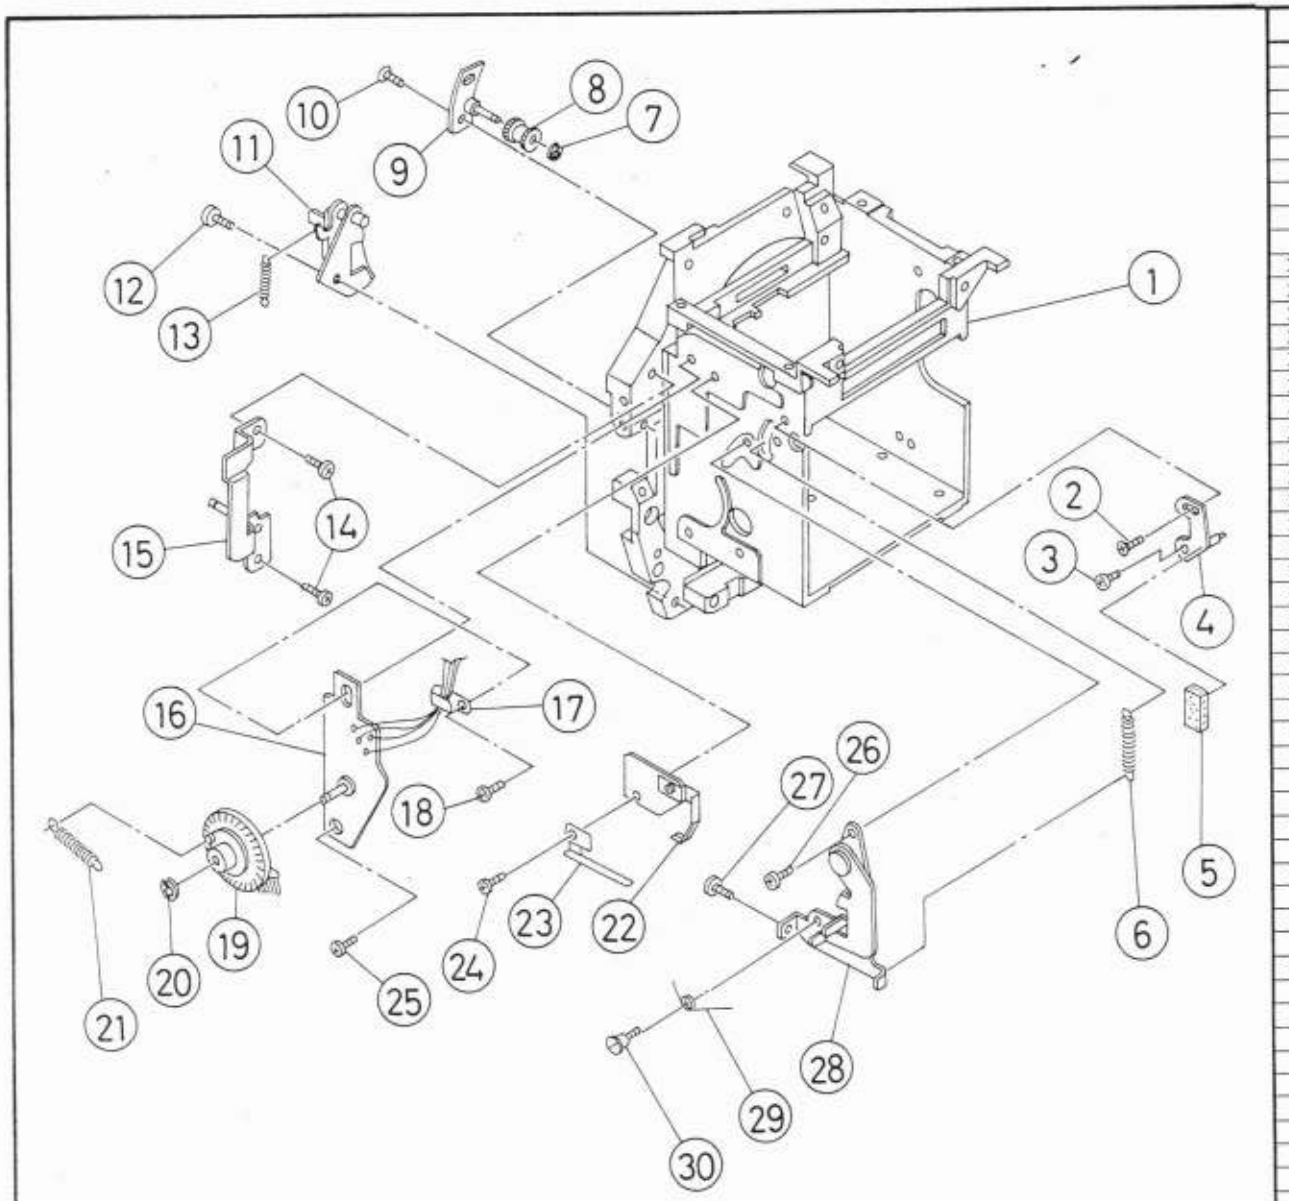

	PARTS NO.	DESCRIPTION	QT'Y
1	*	MIRROR BOX	1
2	63901526	M. HINGE PLATE (RIGHT) S.S	1
3	61802026	M. HINGE PLATE (RIGHT) S.S	1
4	174 B46	M. HINGE PLATE (RIGHT) ASS'Y	1
5	174 784	S. MOQUETTE (2)	1
6	131 747	D. OPERATION LEVER SPRING	1
7	66101225	E RING (E-12)	1
8	174 738	AV GEAR (S)	1
9	174 D31	AV GEAR (S) SHAFT ASS'Y	1
10	61813026	AV GEAR (S) S.S	1
11	*	THETA BASE PLATE	1
12	61912522	THETA BASE PLATE S.S	1
13	174 762	THETA SPRING	1
14	61801826	MOVABLE RING SHAFT S.S	2
15	174 C40	MOVABLE RING SHAFT ASS'Y	1
16	174 C43	AV BASE SUB ASS'Y	1
17	110 928	LEAD WIRE FIXER	1
18	63912022	AV BASE S.S	1
19	174 C44	AV CONTACT ASS'Y	1
20	66101525	E RING (E-15)	1
21	139 831	AV SPRING	1
22	*	MU BASE	1
23	174 772	MU SWITCH (L)	1
24	63912022	MU BASE ASS'Y	1
25	63912226	AV BASE S.S	1
26	61912226	45° LEVER S.S	1
27	66001083	45° ADJUSTING S.S	1
28	174 B47	45° LEVER ASS'Y	1
29	174 826	45° SPRING	1
30	174 827	45° SPRING SHAFT	1
7-9,			
	174 C42	AV GEAR (S) ASS'Y	1
11,13,			
	174 A12	THETA BASE PLATE ASS'Y	1
16,19,20,21 ,			
	174 B42	AV BASE ASS'Y	1
22,23,			
	174 B43	MU BASE ASS'Y	1
1-10,14-30,			
	174 A05	MIRROR BOX ASS'Y	1
		(SEE PAGE NO.11,12,13,15)	

PARTS MARKED * ARE NOT AVAILABLE

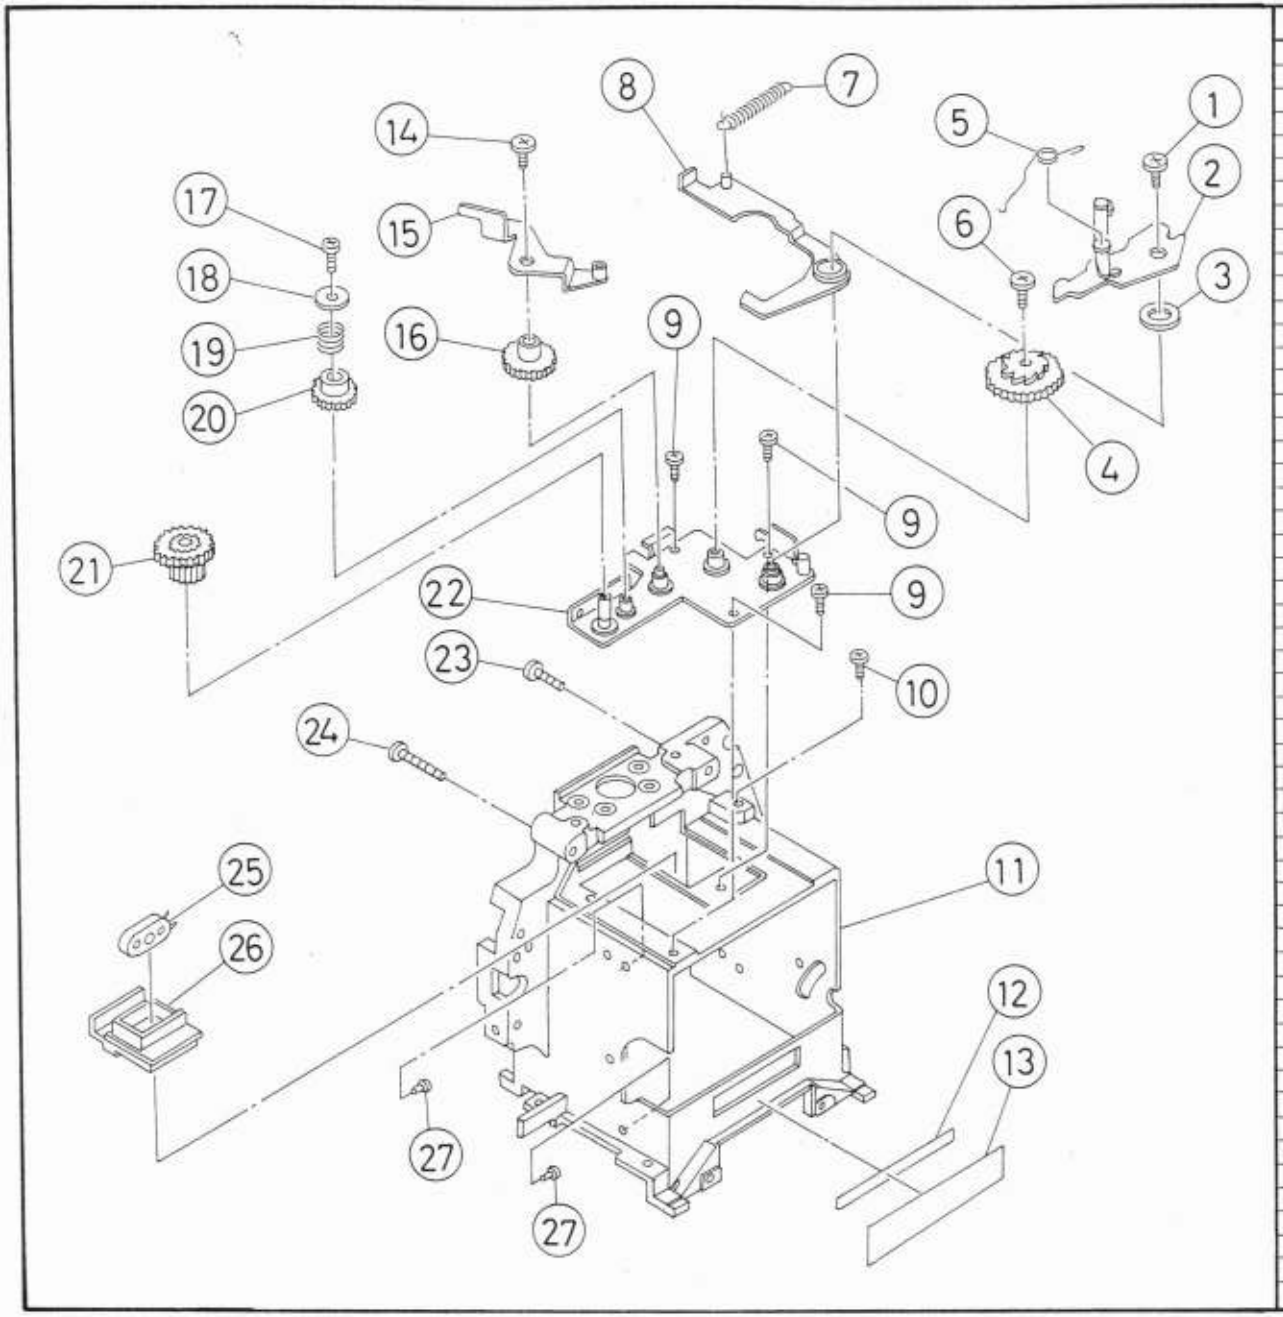

	PARTS NO.	DESCRIPTION	QT'Y
1	66001049	M. START LEVER S.S	1
2	174 C57	M. START LEVER ASS'Y	1
3	60114610	M. START LEVER WASHER (SELECT)	1
	60124610	M. START LEVAE WASHER (SELECT)	1
4	174 621	MIRROR UP GEAR	1
5	174 634	RATCHET ARM SPRING	1
6	66001049	MIRROR UP GEAR S.S	1
7	174 635	APERTURE LEVER SPRING	1
8	174 C56	APERTURE LEVER ASS'Y	1
9	61912026	M. BASE PLATE (L) S.S	3
10	61924026	APERTURE LEVER SPRING SCREW	1
11	*	MIRROR BOX	1
12	159 879	S. LIGHT-PROOF PLATE TAPE	L
13	159 878	S. LIGHT-PROOF PLATE	1
14	66001049	M. APERTURE LEVER S.S	1
15	174 C55	M. APERTURE LEVER ASS'Y	1
16	174 620	M. GEAR (4)	1
17	61912526	M. FRICTION WASHER S.S	1
18	174 615	M. FRICTION WASHER	1
19	174 614	M. FRICTION SPRING	1
20	174 619	M. GEAR (3)	1
21	174 C54	M. GEAR (2) ASS'Y	1
22	*	M. BASE PLATE (L) SUB ASS'Y	1
23	63929026	MIRROR BOX S.S	1
24	66001061	MIRROR BOX S.S	1
25	168 566	SPD	1
26	174 643	D-SPD HOLDER	1
27	174 702	MU GUIDE PIN	2
1-6,8,14-22,			
	174 B48	M. BASE PLATE (L) ASS'Y	1
25,26,			
	174 B51	SPD HOLDER ASS'Y	1
1-6,7-22,25-27,			
	174 A05	MIRROR BOX ASS'Y	1
		(SEE PAGE NO.11,12,13,14)	

PARTS MARKED * IS NOT AVAILABLE

NO.16

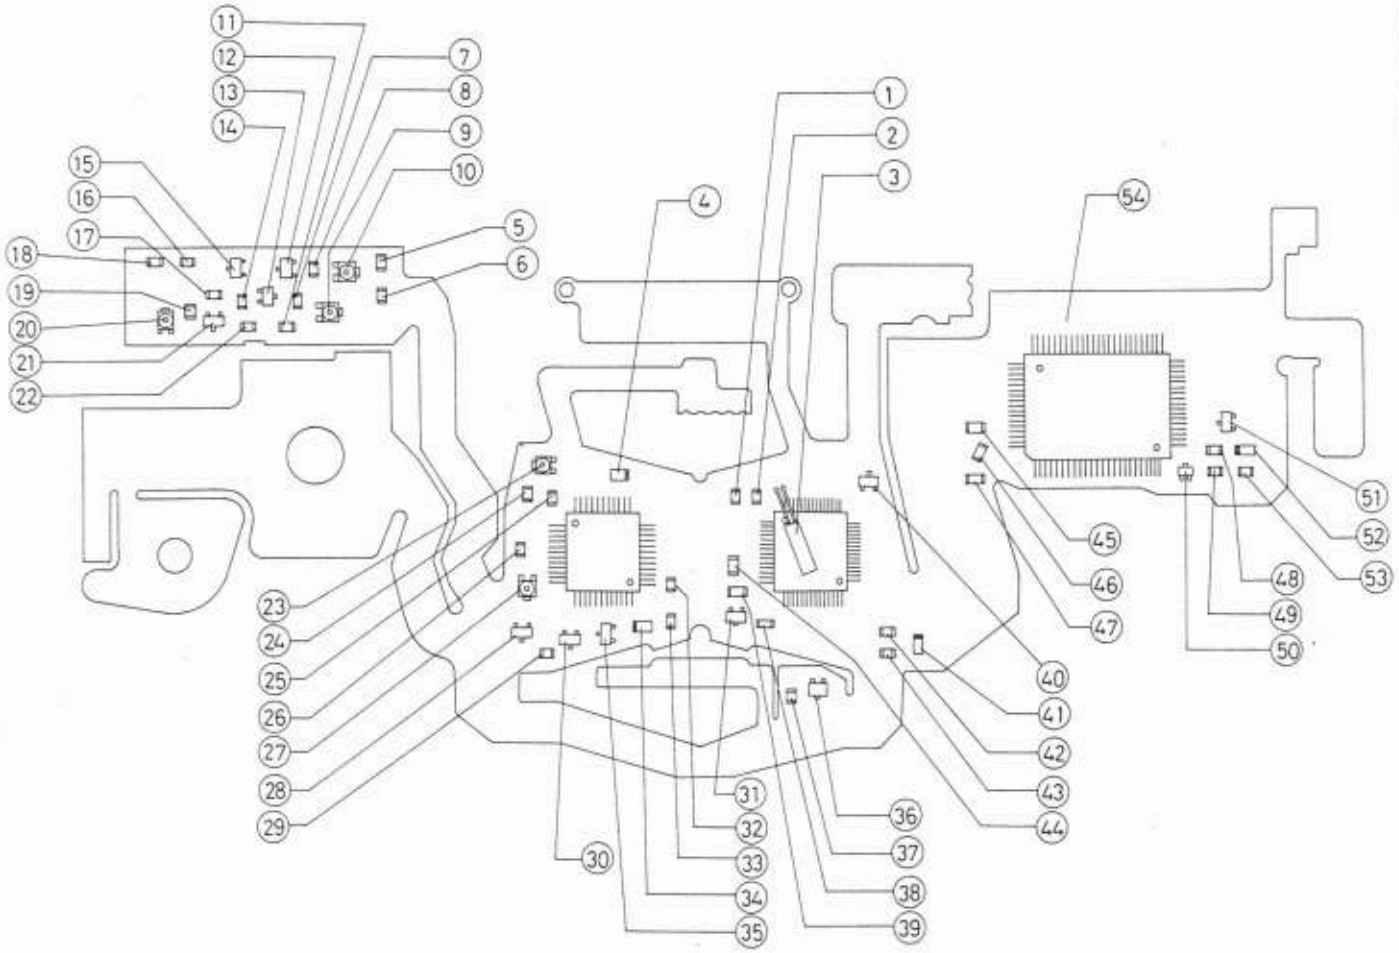

	PARTS NO.	DESCRIPTION	Q'TY
1	137 527	CAPACITOR (10pF) C11	1
2	137 527	CAPACITOR (10pF) C10	1
3	137 506	X'tal OSCILLATOR	1
4	159 551	CAPACITOR (0.1μ) C9	1
5	174 533	RESISTOR (43K ohm) R6	1
6	174 533	RESISTOR (43K ohm) R8	1
7	159 568	RESISTOR (10K ohm) R7	1
8	174 542	RESISTOR (6.2K ohm) R5	1
9	174 545	VARIABLE RESISTOR (10K ohm)Ra4	1
10	174 545	VARIABLE RESISTOR (10K ohm)Ra3	1
11	159 556	RESISTOR (1K ohm) R27	1
12	174 546	TRANSISTOR Tr5	1
13	174 546	TRANSISTOR Tr17	1
14	174 528	RESISTOR (36 ohm) R25	1
15	174 546	TRANSISTOR Tr16	1
		SELECT CAPACITOR	
16	174 524	CAPACITOR (560pF) C8	1
	174 523	CAPACITOR (680pF) C8	1
	174 525	CAPACITOR (750pF) C8	1
	174 538	CAPACITOR (820pF) C8	1
17	174 528	RESISTOR (36 ohm) R28	1
18	174 542	RESISTOR (6.2K ohm) R12	1
19	137 528	CAPACITOR (1000pF) C16	1
20	174 543	VARIABLE RESISTOR(6.8K ohm)Ra5	1
21	174 546	TRANSISTOR Tr18	1
22	159 556	RESISTOR (1K ohm) R27	1
23	174 544	VARIABLE RESISTOR(100K ohm)Ra1	1
24	159 568	RESISTOR (10K ohm) R2	1
25	137 528	CAPACITOR (1000pF) C2	1
26	159 562	RESISTOR (47K ohm) R3	1
27	174 545	VARIABLE RESISTOR (10K ohm)Ra2	1
28	174 519	DIODE D7	1
29	159 556	RESISTOR (1K ohm) R16	1
30	174 547	TRANSISTOR Tr4	1
31	360 542	TRANSISTOR Tr19	1
32	174 553	CAPACITOR (15000pF) C7	1
33	137 528	CAPACITOR (1000pF) C6	1
34	174 55010	CAPACITOR (3.3μ) C15	1
35	174 519	DIODE D6	1
36	174 517	TRANSISTOR Tr31	1
37	174 531	RESISTOR (300 ohm) R22	1
38	159 558	RESISTOR (180 ohm) R4	1
39	159 555	CAPASISTOR (0.15μ) C18	1
40	174 546	TRANSISTOR Tr3	1
41	161 536	CAPASISTOR (1μ) C5	1
42	159 562	RESISTOR (47K ohm) R21	1
43	159 562	RESISTOR (47K ohm) R20	1
44	174 536	RESISTOR (120K ohm) R18	1
45	174 536	RESISTOR (120K ohm) R29	1
46	159 568	RESISTOR (10K ohm) R39	1
47	159 555	CAPASISTOR (0.15μ) C19	1
48	159 555	CAPASISTOR (0.15μ) C13	1
49	159 562	RESISTOR (47K ohm) R19	1
50	174 519	DIODE D8	1
51	174 516	TRANSISTOR Tr29	1
52	161 536	CAPASISTOR (1μ) C1	1
53	174 536	RESISTOR (120K ohm) R30	1
53	*	FPC-1	1
1-54.			
	174 A10	FPC-1 ASS'Y	1

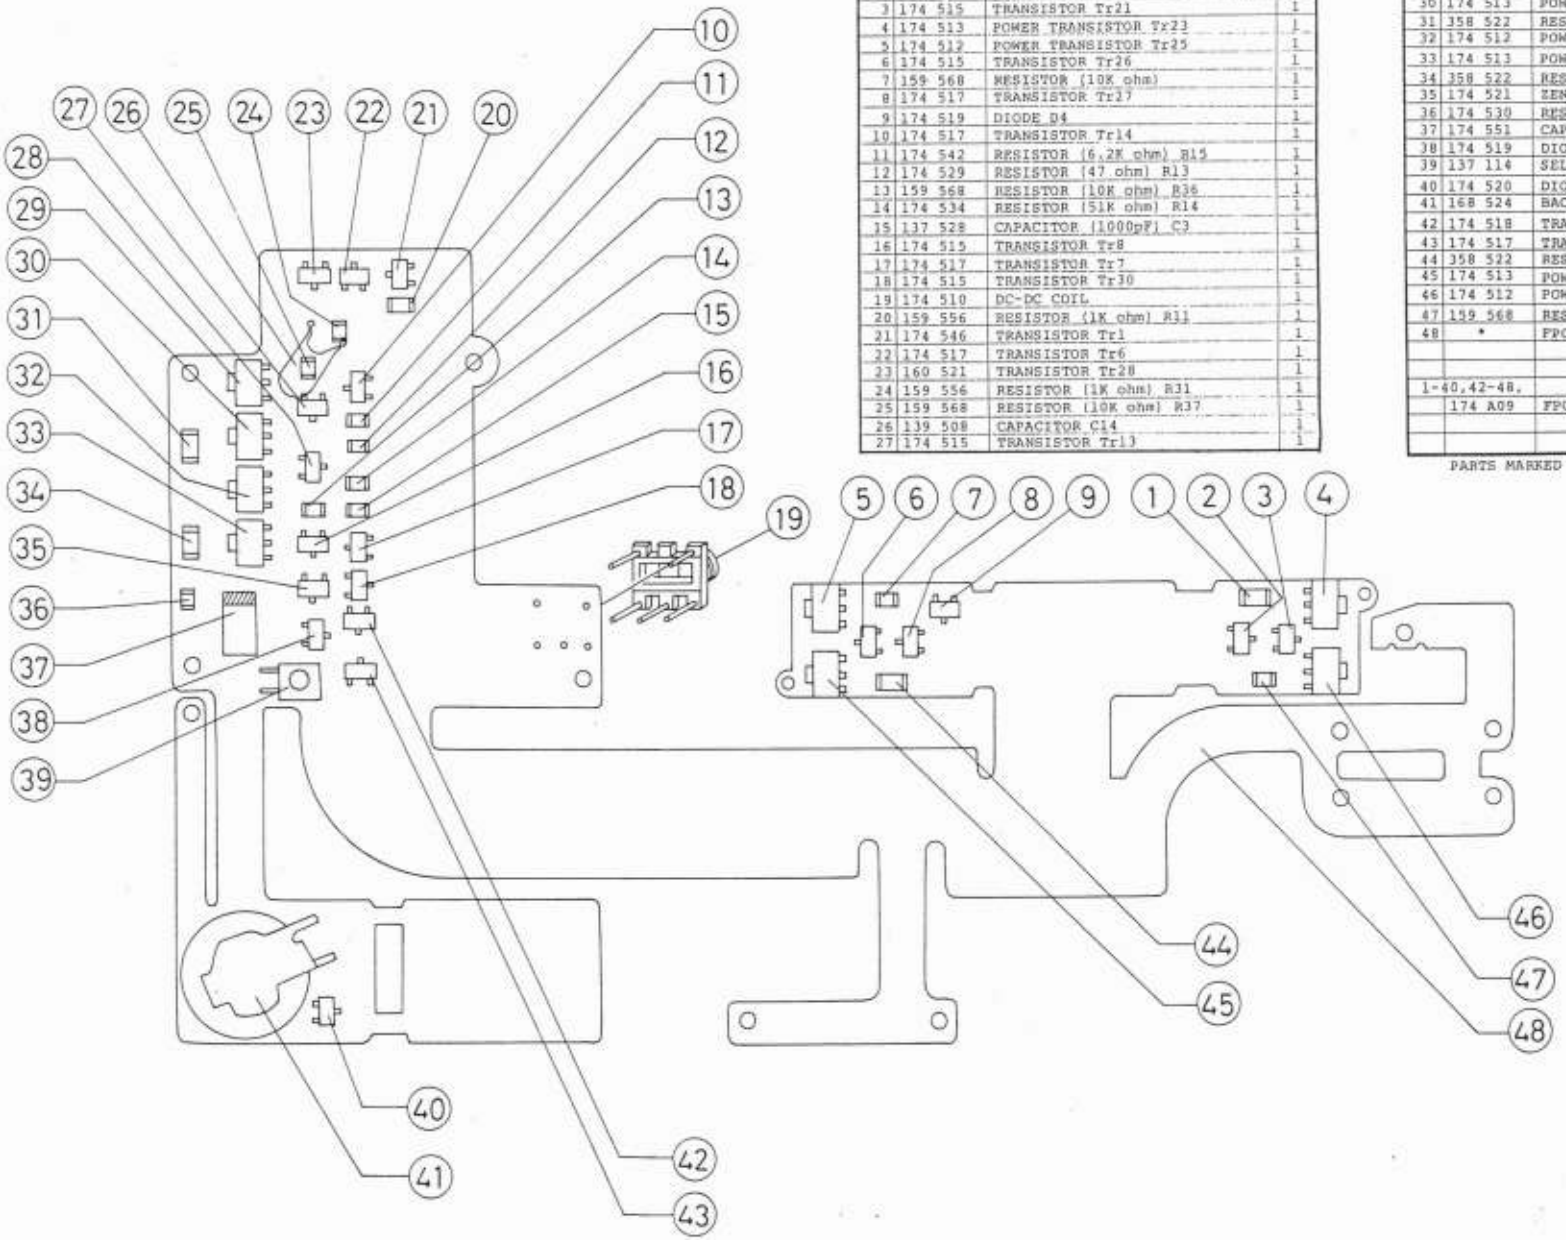

	PARTS NO.	DESCRIPTION	Q'TY
1	358 522	RESISTOR (100 ohm) R35	1
2	174 517	TRANSISTOR Tr20	1
3	174 515	TRANSISTOR Tr21	1
4	174 513	POWER TRANSISTOR Tr23	1
5	174 512	POWER TRANSISTOR Tr25	1
6	174 515	TRANSISTOR Tr26	1
7	159 568	RESISTOR (10K ohm)	1
8	174 517	TRANSISTOR Tr27	1
9	174 519	DIODE D4	1
10	174 517	TRANSISTOR Tr14	1
11	174 542	RESISTOR (6.2K ohm) R15	1
12	174 529	RESISTOR (47 ohm) R13	1
13	159 568	RESISTOR (10K ohm) R36	1
14	174 534	RESISTOR (51K ohm) R14	1
15	137 528	CAPACITOR (1000pF) C3	1
16	174 515	TRANSISTOR Tr8	1
17	174 517	TRANSISTOR Tr7	1
18	174 515	TRANSISTOR Tr30	1
19	174 510	DC-DC COIL	1
20	159 556	RESISTOR (1K ohm) R11	1
21	174 546	TRANSISTOR Tr1	1
22	174 517	TRANSISTOR Tr6	1
23	160 521	TRANSISTOR Tr28	1
24	159 556	RESISTOR (1K ohm) R31	1
25	159 568	RESISTOR (10K ohm) R37	1
26	139 508	CAPACITOR C14	1
27	174 515	TRANSISTOR Tr13	1

	PARTS NO.	DESCRIPTION	Q'TY
28	174 519	DIODE D3	1
29	174 512	POWER TRANSISTOR Tr12	1
30	174 513	POWER TRANSISTOR Tr11	1
31	358 522	RESISTOR (100 ohm) R32	1
32	174 512	POWER TRANSISTOR Tr9	1
33	174 513	POWER TRANSISTOR Tr10	1
34	358 522	RESISTOR (100 ohm) R33	1
35	174 521	ZENER DIODE	1
36	174 530	RESISTOR (750 ohm) R17	1
37	174 551	CAPACITOR (10μ) C4	1
38	174 519	DIODE D4	1
39	137 114	SELF-TIMER LED	1
40	174 520	DIODE D5	1
41	168 524	BACK UP BATTERY (BR1225)	1
42	174 518	TRANSISTOR Tr2	1
43	174 517	TRANSISTOR Tr5	1
44	358 522	RESISTOR (100 ohm) R34	1
45	174 513	POWER TRANSISTOR Tr24	1
46	174 512	POWER TRANSISTOR Tr22	1
47	159 568	RESISTOR (10k ohm) R10	1
48	*	FPC-2	
1-40,42-48,			
	174 A09	FPC-2 Ass'Y	1

PARTS MARKED * IS NOT AVAILABLE

Scan by Equiphoto